

**Head Office** Neptronic 400 Lebeau Blvd. Montreal, Quebec, Canada H4N 1R6 Tel.: (514) 333-1433 Fax: (514) 333-3163 Toll Free: 1-800-361-2308 ISO 9001:2008

## Where's the Transfo?

## Peripherals' Power Supply

SKR Residential Steam Humidifiers comes with a choice of kits which include PC board. humidity controller and accessories. The default kit is the Kit-R featuring the HRR100 Room Humidity Controller. On occasion, customers prefer to change the controller to a digital one like the HRO20 for esthetic reasons. However, making this change also requires changing the PC board (note that both of these are included in the Kit-N). This new PC board requires a different power supply, which in turn requires a transformer. Without the transformer, the SKR won't be able to operate properly anymore. Thus, it is highly recommended for anyone switching from a Kit-R SKR to a Kit-N SKR with a HRO20 humidity controller to also purchase a transformer. All other details concerning the different SKR kits and their requirements are specified in the installation brochures available on our website.



HRR100



HRO20



USA NEP Inc. P.O. Box 1151 Medford Oregon, USA 97501 Tel.: (541) 531-5746 Middle East & Asia NEP International FZE P.O. Box 125687, Tel.: +97155 8825487 Fax: +9714 3426772

Singapore Neptronic Pte Ltd Office D6, #03-38, Mountbatten Square 229, Mountbatten Road, Singapore - 398 007 Mobile: +65 8118 4184 Tel: +65 6650 6212 Fax: +65 6491 6423