Wall Thermostat Specification & Installation instructions




Feature:

• Celsius or Fahrenheit scale


ITO3-C

ITO3-F

Technical Data	ITO3-C	ITO3-F
Scale	Celsius	Fahrenheit
Set point range	14°C to 30°C	57°F to 86°F
Electrical connection		
Operating temperature	2°C to 35°C (35°F to 95°F)	
Storage temperature	0°C to 50°C (32°F to 122°F)	
Potentiometer	2.5 K ohms	
Relative Humidity	5 to 95 % non condensing	
Ingress protection	IP 30 (EN 60529)	
Weight	68 g. [0.15 lb]	
Application	The temperature set point adjustment without sensor ITO3 series must be used with a duct temperature sensor from Neptronic® to control a DF series Duct heater, a BM023C actuator or a TCA or VVC controller from Neptronic®	

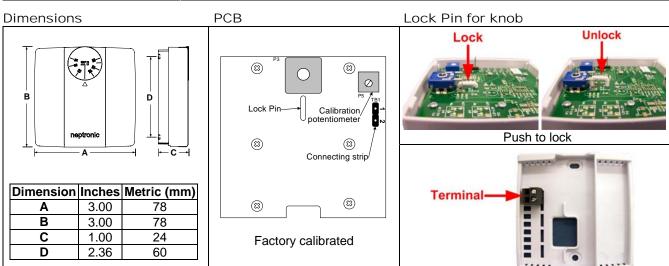

Mounting Instructions

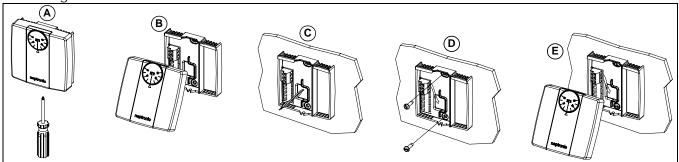

- A. Remove the screw (captive) holding the base and the front cover of the room set point sensor enclosure.
- B. Lift the front cover of the enclosure to separate it from the base.
- C. Pull wire through the base hole.
- D. Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- E. Mount the control module on the base and secure using the screw.

Recycling at end of life



At end of life, please return the electronic control to your Neptronic® local distributor for recycling. If you need to find the nearest Neptronic® authorized distributor, please consult www.neptronic.com.

ITO3/080523