



## SRR100

### Features:

- Remote set point controller
- Mounting plate for wall mount installation



| Technical Data        | SRR100   |
|-----------------------|--|
| Connection            | Use the cables with jack connectors provided by Neptronic®   |
| Operating temperature | 32°F to 104°F [0° C to 40° C]  |
| Storage temperature   | 14°F to 122°F [-10° C to +50° C]   |
| Relative Humidity     | 0 to 95 % R.H.   |
| Set point adjustment  | 0 to 70 % R.H.   |
| Alarm Status          | See SKR series Steam Humidifier Installation instructions & user manual section 16 – Type of alarm |
| Installation          | Install the SRR100 on wall.  |
| Weight                | 0.13lb [60g]   |

### Dimensions

| Dimension | Inches | Metric (mm) |
|-----------|--------|-------------|
| A         | 3.00   | 78          |
| B         | 3.00   | 78          |
| C         | 1.00   | 24          |
| D         | 2.36   | 60          |

### Wiring Diagrams

#### Connection to HRD100 duct humidity controller

Connect the wall humidity controller (SRR100) with a cable (included with the humidifier) to the phone jack connector on the HRD100 duct humidity controller.