



neptronic®

Steam Humidifier

SK300 Series

Installation Instructions and User Manual



Foreword

Neptronic Company Overview

Founded in 1976, we're a private corporation that designs, manufactures and distributes products for the HVAC industry. Our product line includes intelligent controllers, electronic actuators, actuated valves, humidifiers and electric heaters.

Our products are designed and manufactured by over 250 dedicated employees in our 7,500 m² (80,000 ft²) state-of-the-art facility located in Montreal, Canada. Using a vertical integration model, our entire manufacturing chain is under one roof from software and hardware development, to SMT circuit board assembly, to sheet metal fabrication, to product testing ensuring that our products are engineered to last.

We currently hold several national and international patents and with our continued commitment to research and development, we provide innovative products and technologies for the ever-evolving challenges of the HVAC industry. Exporting over 70% of our sales, we have an exclusive distribution network around the globe that provides comprehensive solutions to our worldwide customers.

About the Manual

These installation and operation instructions have been developed to facilitate the installation of the Steam Humidifier.

- The strict application of these instructions will ensure the conformity of your installation and operation as per the manufacturer's recommendations.
- The application of these instructions is one of the conditions for the application of the warranty.
- The application of these instructions does not ensure, at any time conformity to procedures, regulation or local codes, regarding electric installation and connection to local water supply.

This product has been declared to conform to the applicable Canadian and American safety standards and directives and bear the CSA (c) & (us) mark. The Certificate of Conformity, CSA is available, upon request with the manufacturer.

2015[®]: All rights reserved. This document cannot be reproduced totally or partially by any means whether, electronic, mechanical, photocopy, recording or other, without prior written authorization of Neptronic.

Electricity



All work concerned with electrical installation **MUST** only be performed by skilled and qualified technical personnel such as an electrician or a technician with appropriate training). The customer is always responsible for ensuring the suitability of the technical personnel.

Please observe the local regulations concerning the provision of electrical installations.

Correct Use

Neptronic systems and its products are designed only for humidification use. Any other application is not considered appropriate for the intended purpose. The manufacturer cannot be made liable for any damage resulting from incorrect use.

General Warranty

To view the complete Neptronic General Conditions of Sale and Warranty, go to www.neptronic.com/Sales-Conditions.

Handling and Lifting



Lifting or handling **MUST** be carried out by trained and qualified personnel. Ensure that the lifting operation has been properly planned, assessed for risk and that the equipment has been checked by a competent Health & Safety representative, and effective control measures are in place.

It is the customer's responsibility to ensure that the operators are trained in handling heavy goods and to enforce the relevant lifting regulations.

The Steam Humidifier **MUST** always be handled and lifted with care and should remain in its original packaging for as long as possible prior to installation.

The Steam Humidifier package may be carried using a forklift from the underside. Caution should be exercised to ensure balanced load before lifting.

Unpacking

The Steam Humidifier is shipped inside carton boxes or in a wooden crate. Remove packing and skids prior to commissioning.

Lists

Illustrations

| | |
|--|----|
| Illustration 1 - Overview of the Humidifier | 1 |
| Illustration 2 - Steam Humidifier with Space Distribution Unit..... | 2 |
| Illustration 3 - Weather Proof Enclosure..... | 3 |
| Illustration 4 - Positioning the Humidifier..... | 4 |
| Illustration 5 - Weather Proof Enclosure Unit..... | 6 |
| Illustration 6 - Steam Absorption Manifold (S.A.M) Horizontal Duct | 6 |
| Illustration 7 - Steam Absorption Manifold (S.A.M.E2) Horizontal Duct..... | 7 |
| Illustration 8 - Steam Absorption Manifold (S.A.M. or S.A.M.E2) Vertical Duct | 7 |
| Illustration 9 - Multi Steam System..... | 7 |
| Illustration 10 - Duct Hole Dimensions and Minimum Distance | 8 |
| Illustration 11 - 1 3/8" (35mm) Diameter Pipe Placement: Horizontal Duct..... | 9 |
| Illustration 12 - 2 1/8" (51mm) Diameter Pipe Placement: Horizontal Duct..... | 9 |
| Illustration 13 - Eyelet Orientation | 9 |
| Illustration 14 - 1 3/8" (35mm) Diameter Pipe Placement: Vertical Duct | 10 |
| Illustration 15 - 2 1/8" (51mm) Diameter Pipe Placement: Vertical Duct | 10 |
| Illustration 16 - Steam Output Connections: Typical Installation..... | 11 |
| Illustration 17 - Steam Output Connection: Incorrect Installation..... | 11 |
| Illustration 18 - Steam Separator (S trap) Installation | 12 |
| Illustration 19 - SDU mounted on Humidifier..... | 13 |
| Illustration 20 - SDU Remote Installation | 14 |
| Illustration 21 - Plumbing Connections..... | 15 |
| Illustration 22 - Water Supply Connections | 16 |
| Illustration 23 - Weather Proof Enclosure Plumbing: Front View | 17 |
| Illustration 24 - Weather Proof Enclosure Plumbing: Side View | 17 |
| Illustration 25 - One and Three Phase Power Connections..... | 18 |
| Illustration 26 - Low Voltage Control Connections | 19 |
| Illustration 27 - Connection to HRO20 humidistat or HRO20 with remote humidity sensor (SHR10 or SHC80)..... | 19 |
| Illustration 28 - Humidity controlled by humidifier with SHR10 or SHC80 as space sensor | 20 |
| Illustration 29 - VAV system with humidity controlled by humidifier using Hi limit sensor and space sensor | 20 |
| Illustration 30 - Humidity Signal 0-10 Vdc | 21 |
| Illustration 31 - Humidity Signal 2-10 Vdc | 21 |
| Illustration 32 - Humidity Signal 4-20 mA | 21 |
| Illustration 33 - Control Signal 0 to 10 Vdc..... | 22 |
| Illustration 34 - Control Signal 2 to 10 Vdc..... | 22 |
| Illustration 35 - Control Signal 4-20 mA | 22 |
| Illustration 36 - Common Alarm Connections..... | 23 |
| Illustration 37 - Controls Placement (Steam Dispersed into a Duct or AHU)..... | 23 |
| Illustration 38 - Display Features: Front Panel | 24 |
| Illustration 39 - Main PC Board | 28 |
| Illustration 40 - Metal deposit dislodge during operation..... | 32 |

| | |
|---|----|
| Illustration 41 - Water Level Sensor | 32 |
| Illustration 42 - Water Level Sensor and Protection Chamber | 33 |
| Illustration 43 - Exploded View of Humidifier | 35 |

Tables

| | |
|--|----|
| Table 1 - Dimensions and Weight of SDU | 2 |
| Table 2 - Weather Proof Enclosure: Dimensions and Weight..... | 3 |
| Table 3 - Output and Power Consumption | 3 |
| Table 4 - Dimensions for Drilling Holes | 5 |
| Table 5 - Recommendation for S.A.M Distribution Pipes | 8 |
| Table 6 - Dimensions for Plumbing Connection | 15 |
| Table 7 - Humidifier Front Panel Display Description | 24 |
| Table 8 - Scroll Mode Display Description | 25 |
| Table 9 - Diagnostic Mode Display Descriptions..... | 26 |
| Table 10 - Model Description and Part Numbers | 36 |
| Table 11 - Model, Heater Element, Transformer, and Voltage Description | 37 |

Contents

| | |
|---|----|
| Handling and Lifting | ii |
| Overview..... | 1 |
| List of Accessories Supplied..... | 1 |
| Visual Overview | 1 |
| Available Options | 1 |
| Description of Components | 2 |
| Humidifier with Space Distribution Unit | 2 |
| Dimensions and Weight | 2 |
| Weather Proof Enclosure..... | 3 |
| Weather Proof Enclosure - Dimensions and Weight..... | 3 |
| Output and Power Consumption - Humidifier | 3 |
| Mechanical Installation | 4 |
| General Recommendations | 4 |
| Location..... | 4 |
| Positioning..... | 4 |
| Wall Mounting..... | 5 |
| Positioning and Mounting – Weather Proof Enclosure Unit | 6 |
| General Recommendations | 6 |
| Steam Dispersion System | 6 |
| Steam Dispersion System Selection..... | 6 |
| Positioning S.A.M and S.A.M.E2..... | 8 |
| Placement of Steam Pipe in Horizontal Duct..... | 9 |
| Placement of Steam Pipe in Vertical Duct | 9 |
| Steam Output Connections | 11 |
| Installation..... | 11 |
| General Recommendations | 11 |
| Position of Steam Output..... | 12 |
| Small Cabinet..... | 12 |
| Medium Cabinet | 12 |
| Large Cabinet..... | 13 |

| | |
|---|----|
| Installation - Humidifier with SDU | 13 |
| Remote Installation of SDU..... | 14 |
| Maintenance of the SDU | 14 |
| Plumbing Connections | 15 |
| Water Supply | 15 |
| Water Connections | 16 |
| Drain Connections | 16 |
| Weather Proof Enclosure Plumbing Connection | 17 |
| Power Supply Connections | 18 |
| Low Voltage Control Connections | 19 |
| ON/OFF Humidifier | 19 |
| Modulating Humidifier | 19 |
| Common Alarm Connections | 23 |
| Controls Placement (Steam Dispersed into a Duct or AHU) | 23 |
| Display..... | 24 |
| Front Panel | 24 |
| Modes – Description | 25 |
| OFF Mode | 25 |
| Scroll Mode | 25 |
| Diagnostic Mode..... | 26 |
| Programming Mode..... | 26 |
| Control P.C. Board | 28 |
| Main P.C. Board..... | 28 |
| Modulating P.C. Board..... | 29 |
| Start-up Procedure | 29 |
| Service..... | 30 |
| Clean the Evaporation Chamber | 30 |
| Exploded View and Bill of Material | 35 |
| Exploded View | 35 |
| Bill of Material | 36 |
| Troubleshooting..... | 38 |
| Notes | 43 |

Overview

List of Accessories Supplied

The following accessories are supplied with the SK300 Steam Humidifier:

- 2 sets of keys.
- 2 adjustable collars for the connection of the steam hose for each steam output.
- 1 female compression fitting $\frac{3}{4}$ (19mm) hydraulic for the drain output of the evaporation chamber.
- 1 female compression fitting $\frac{1}{2}$ (13mm) hydraulic for the drain output of the drip pan.
- 1 female fitting and a braided hose for the water supply connection.
- 1 Installation Instructions and User Manual.

Visual Overview

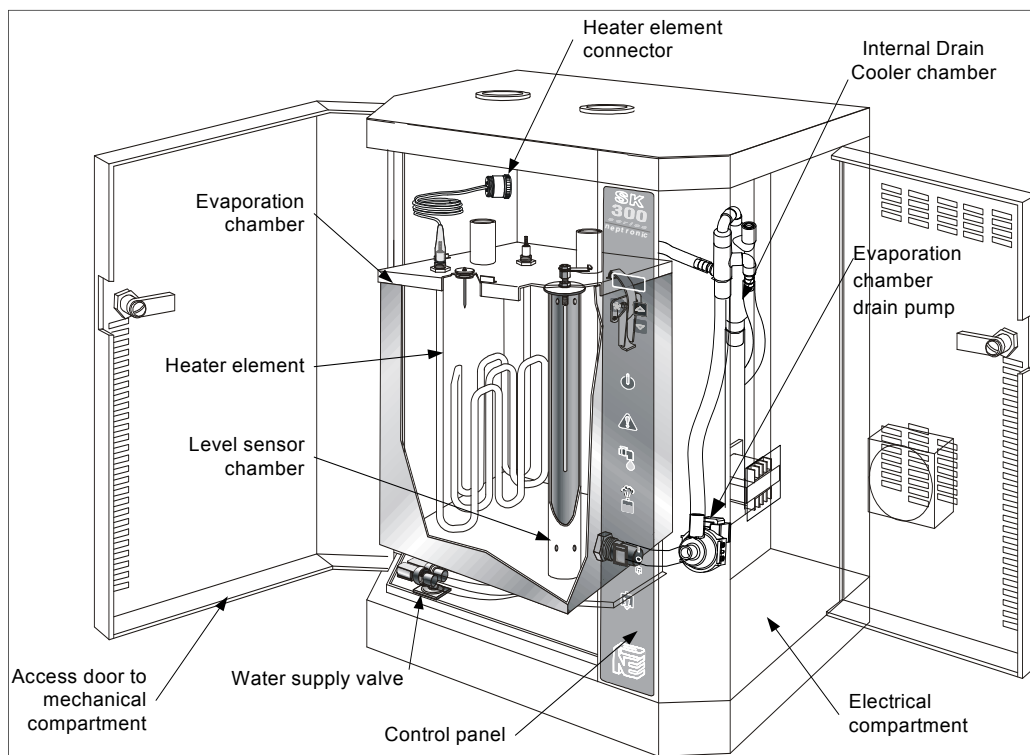


Illustration 1 - Overview of the Humidifier

Available Options

The following options are available when purchasing a SK300 humidifier:

| Model | Description |
|--------------------------|--|
| Suffix M (SK320M) | Modulating control humidifier |
| SF DI-APPLICATION | Humidifier for a system supplied with Deionised water or Reverse Osmosis water, dissolved solids more than 1 ppm |
| SF ULTRAPURE-DI | Humidifier for a system supplied with Deionised water or Reverse Osmosis water, dissolved solids more than 0.028 ppm |
| SDU-REM | Space Distribution Unit mounted on humidifier (SDU) or remote installation |
| Suffix B (SK320M-600-3B) | Network Communication System - BACnet |
| SK320M-600-3P | Stainless steel humidifier cabinet |
| SF SK300 FANRELAY | Dry contact to activate an external fan relay on a call for humidity |



Description of Components

- *Evaporation Chamber.* Assembly includes a metal cylinder and a cover equipped with one or several heater elements. It is the most important part of the humidifier, which produces the steam.
- *Space Distribution Unit (SDU).* Integrated steam distribution unit, optional on certain humidifiers.
- *Multi-Steam System.* Custom made system for steam distribution. This system is designed to allow very short absorption distances (less than 3 feet or 900mm) applications.
- *Steam Absorption Manifold (S.A.M.).* Steam manifold adapted to air duct size, allows steam absorption in relatively short distance (less than 5 feet or 1500mm) applications.
- *Steam Absorption Manifold with 2 Eyelets (S.A.M.E2).* Steam manifold with two eyelets, adapted to applications with restricted air duct dimensions that allow steam absorption in relatively short distance (less than 5 feet or 1500mm) applications.

Humidifier with Space Distribution Unit

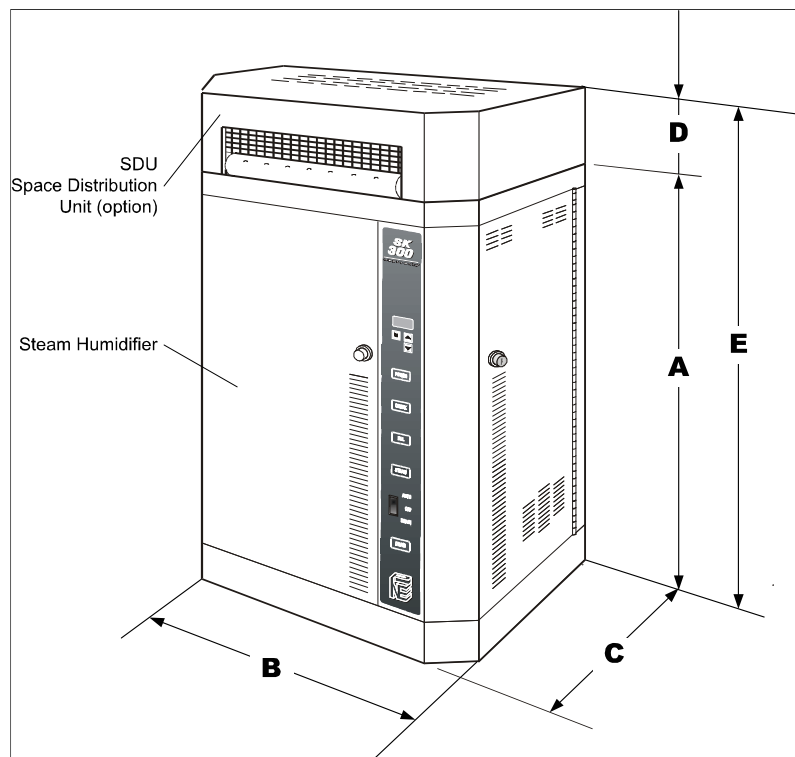


Illustration 2 - Steam Humidifier with Space Distribution Unit

Dimensions and Weight

Table 1 - Dimensions and Weight of SDU

| Model | Dimensions of the Cabinet inch (mm) | | | | | Weight lb (kg) | | SDU lb (kg) |
|-------|-------------------------------------|------------|------------|------------|-------------|----------------|----------|-------------------------|
| | A | B | C | D | E | Empty | Full | |
| | | | | | | SK302 | SK304 | |
| | 23 ½ (597) | 18 ½ (470) | 11 ½ (292) | 5 ⅝ (140) | 29 ⅛ (737) | 44 (20) | 57 (26) | SDU-1 20 (9) |
| | 28 ½ (724) | 21 (533) | 12 ½ (318) | 6 ⅝ (165) | 35 ⅛ (890) | 66 (30) | 115 (52) | SDU-2 25 (11) |
| | 28 ½ (724) | 21 (533) | 12 ½ (318) | 12 ⅞ (324) | 41 ⅜ (1048) | 66 (30) | 115 (52) | SDU-3 45 (20) |
| | 31 ¼ (794) | 32 (813) | 12 ½ (318) | - | - | 110 (50) | 205 (93) | - |

Weather Proof Enclosure

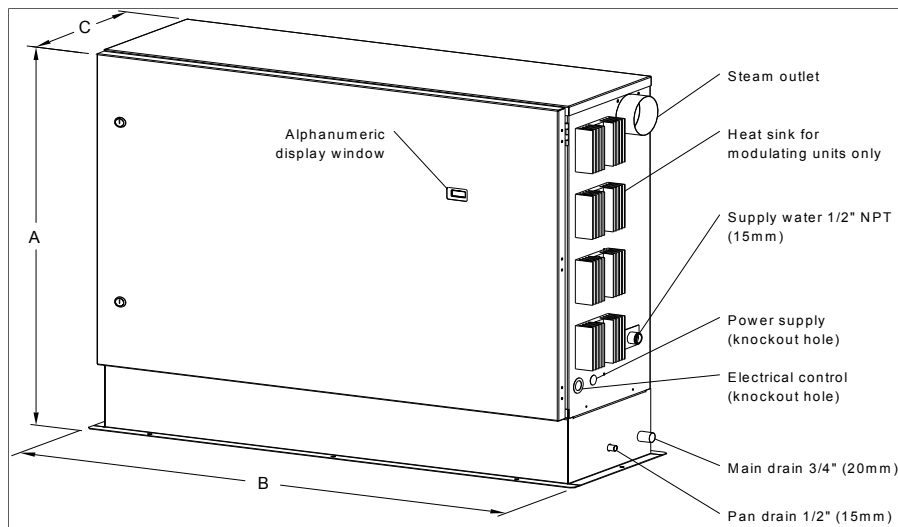


Illustration 3 - Weather Proof Enclosure

Weather Proof Enclosure - Dimensions and Weight

Table 2 - Weather Proof Enclosure: Dimensions and Weight

| Model | Dimensions of the Cabinet inch (mm) | | | Weight lb (kg) | |
|----------------------------------|-------------------------------------|-------------|------------|----------------|-----------|
| | A | B | C | Empty | Full |
| | | | | | |
| SK302 SK304 SK306 | 28.5 (724) | 25.8 (655) | 11.3 (287) | 66 (30) | 79 (36) |
| SK310 SK314 SK320 SK330 | 34.5 (876) | 29.8 (757) | 13.3 (338) | 95 (43) | 144 (65) |
| SK340 SK360 | 34.5 (876) | 40.8 (1036) | 13.3 (338) | 165 (75) | 260 (118) |

Output and Power Consumption - Humidifier

Table 3 - Output and Power Consumption

| Model | Steam | Power (KW) | Consumption | | | | | | | Steam Output | |
|-------|------------------------|------------|--------------|-------|-------|-------|-------|-------|-------|--------------|--------------------|
| | Capacity lb/hr (kg/hr) | | Amperage (A) | | | | | | | Qty | Diameter inch (mm) |
| | | | 240/1 | 208/1 | 208/3 | 480/1 | 480/3 | 600/1 | 600/3 | | |
| SK302 | 6 (2.7) | 2 | 8.5 | 10 | - | 4.5 | - | 3.5 | - | 1 | 1 3/8 (35) |
| SK304 | 12 (5.5) | 4 | 17 | 19 | 11.5 | 8.5 | 5 | 7 | 4 | 1 | 1 3/8 (35) |
| SK306 | 18 (8) | 6 | 26 | 30 | 16.5 | 13 | 7.2 | 10.5 | 6 | 1 | 1 3/8 (35) |
| SK310 | 30 (14) | 10 | - | - | 28 | - | 12 | - | 10 | 1 | 1 3/8 (35) |
| SK314 | 40 (19) | 13.5 | - | - | 38 | - | 16.5 | - | 13.5 | 1 | 1 3/8 (35) |
| SK320 | 60 (28) | 20 | - | - | * | - | 25 | - | 20 | 2 | 1 3/8 (35) |
| SK330 | 90 (41) | 30 | - | - | - | - | 36 | - | 30 | 2 | 1 3/8 (35) |
| SK340 | 120 (56) | 40 | - | - | * | - | 50 | - | 40 | 2 | 2 1/8 (54) |
| SK360 | 180 (82) | 60 | - | - | - | - | 72 | - | 60 | 3 | 2 1/8 (54) |

* Available, consult factory.



Note: Program maximum steam output using the Lock On function in Program Mode on Modulating Humidifier.


WARNING: For Modulating Humidifier, maintain the maximum power of the electrical installations according to the information in the Table 3 - Output and Power Consumption.
Do not consider a possible reduction of steam output due to modulation.

Mechanical Installation

General Recommendations



WARNING: Risk of electric shock. Disconnect the appliance from electric supply before commencing installation.



Note: Mechanical installation should conform to local codes and regulations.

Location



WARNING: The SK300 series humidifiers are designed for indoor installation only. For outdoor installation, the SK300 must be installed using a Neptronic weather-proof enclosure (see Positioning and Mounting – Weather Proof Enclosure Unit on page 6). Failure to follow these guidelines will void the warranty.

Consider the following points before deciding the location for the SK300 Steam Humidifier:

- Plan a location that is easy to access and permits an easy inspection and servicing of the humidifier.
- Do not install the humidifier where failure of the appliance could cause damage to the building structure or to other expensive equipment.
- The location should be well ventilated and the ambient temperature should not exceed 30°C (85°F).
- Consider the total steam line length between the humidifier and the steam distributor based on the steam line material type:
 - For flexible steam hose, total steam line should not exceed 16 feet (5 meters). For longer distances, use insulated hard piping.
 - For insulated hard piping, the total steam line is determined by the humidifier capacity: one equivalent foot for each lb/h capacity of the humidifier (0.67m for each kg/h), with a maximum of 50 feet (15m). For longer steam line runs, consult factory.

Positioning

- The front panel and the right side (electrical compartment) should be accessible in order to permit servicing.
- Leave a clearance of at least 48" (1.25m) to the front panel and 24" (0.6m) to the right side.
- Mount the humidifier at a minimum height of 39" (1m) to 48" (1.2m) above floor level.
- Leave a clearance of at least 10" (0.25m) under the humidifier for installation of water supply, drain piping, and electrical connections.

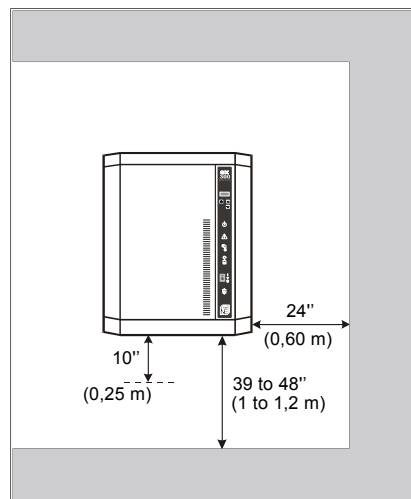


Illustration 4 - Positioning the Humidifier

Wall Mounting



Caution: Risk of malfunction. The humidifier must be placed at an equal level.

Caution: Risk of overheating. Do not block the ventilation openings located on the top, front, sides, and rear of the cabinet.

Check the strength of the chosen support or wall (bricks, concrete, stud partition wall) on which the humidifier will be mounted. See the Dimensions and Weight section to know the weight of the unit.

- Use the keyholes located on the back panel of the humidifier.
- Before proceeding to perform the wall mounting, take off the Evaporation Chamber sub-assembly (see Service section).
- Drill holes for the upper anchors (holes with eyelet) into the support or wall as per dimensions specified in Table 4 - Dimensions for Drilling Holes.
- The holes dimensions (diameter and depth) should be in accordance with the recommendations of the chosen anchors.

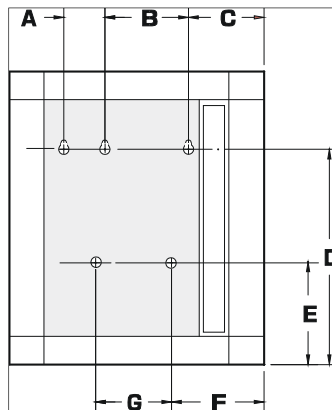


Table 4 - Dimensions for Drilling Holes

| Model | Dimensions in inches (mm) | | | | | | |
|----------------------------------|---------------------------|----------|--------------|--------------|----------|----------------|----------|
| | A | B | C | D | E | F | G |
| SK302 SK304 SK306 | - | 8 (202) | 5 3/16 (165) | 19 3/4 (516) | - | - | - |
| SK310 SK314 SK320 SK330 | - | 10 (254) | 8 (203) | 24 5/8 (625) | 11 (276) | 8 (203) | 10 (254) |
| SK340 SK360 | 4 (102) | 12 (305) | 10 1/2 (265) | 27 1/2 (698) | 11 (276) | 22 43/64 (576) | - |

- Install bolt anchors, if required.
- Screw-on the 2 or 3 upper screws (holes with eyelet) of a minimum diameter of #10 (6mm) (screws are not supplied).
- Leave a clearance between head screws and the wall, in order to permit the mounting of the humidifier.
- Use the keyholes located on the back panel of the humidifier.
- Hang the humidifier on 2 or 3 screws. It is preferable to keep the front door open during this operation. Based on the size and weight of the humidifier, you may need the help of another person.
- When the humidifier is positioned on the upper screws, tighten the screws to secure the humidifier.
- If applicable, install and secure lower screws.



Positioning and Mounting – Weather Proof Enclosure Unit

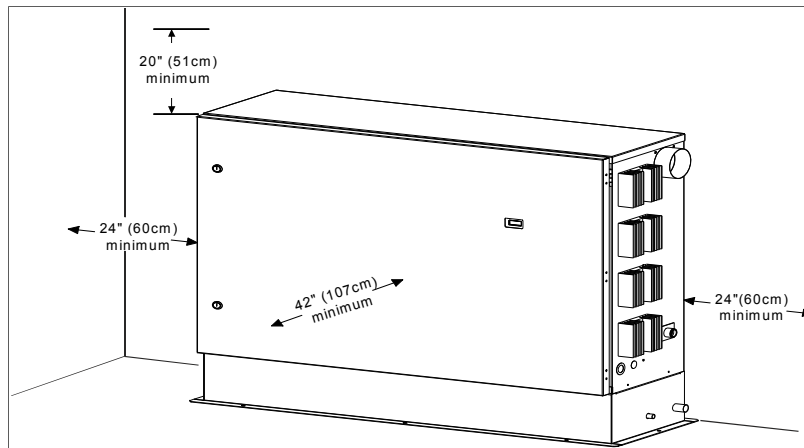


Illustration 5 - Weather Proof Enclosure Unit

General Recommendations

- Plan a location that is easy to access and permits an easy inspection and servicing of the humidifier.
- Do not install the humidifier where failure of the appliance could cause damage to the building structure or to other expensive equipment.
- Maintain the following minimum clearances while installing to enable access for inspection and servicing.

| Side | Minimum Clearance |
|------------|-------------------|
| Top | 20" (51 cm) |
| Both sides | 24" (60 cm) |
| Front | 42" (107 cm) |

- The humidifier is designed to be installed directly on the floor/roof or a curb.
- Provide a level, solid foundation for the humidifier.
- Ensure that the floor/roof beneath the humidifier is water proof to withstand any water spillage during servicing or if a problem occurs.
- Attach the SK enclosure securely and safely.

Steam Dispersion System

Steam Dispersion System Selection

In order to prevent the accumulation of condensation in air ducts, Neptronic has designed four basic configurations of steam distribution systems to provide you with the most economical solution for any particular application.

Steam Absorption Manifold (S.A.M) Horizontal Duct

The S.A.M system is suitable for installations where absorption distances are short, less than 5 feet (1500mm), and/or low duct temperatures are in effect.

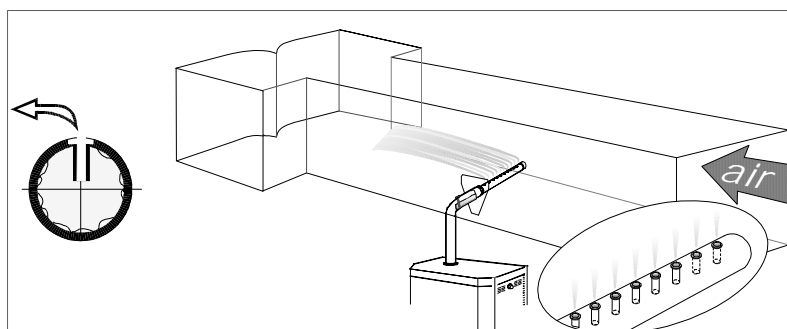


Illustration 6 - Steam Absorption Manifold (S.A.M) Horizontal Duct

Steam Absorption Manifold (S.A.M.E2) Horizontal Duct

The S.A.M.E2 system is suitable for installations where absorption distances are short, less than 5 feet (1500mm) and/or low duct temperatures are in effect. SAME2 are used in applications with restricted duct dimensions.

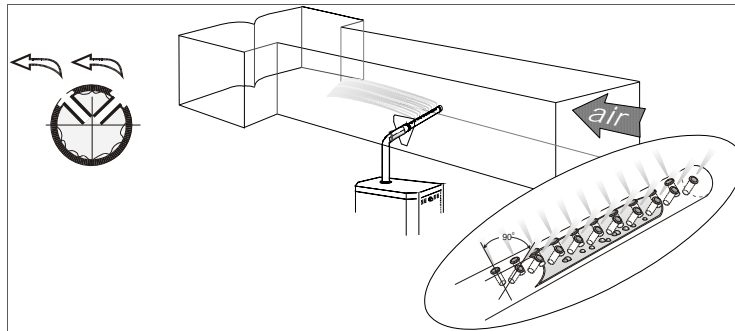


Illustration 7 - Steam Absorption Manifold (S.A.M.E2) Horizontal Duct

Steam Absorption Manifold (S.A.M. or S.A.M.E2) Vertical Duct

S.A.M or S.A.M.E2 systems for vertical ducts are used where the absorption distances are normal and the requirement is for an economical and efficient solution.

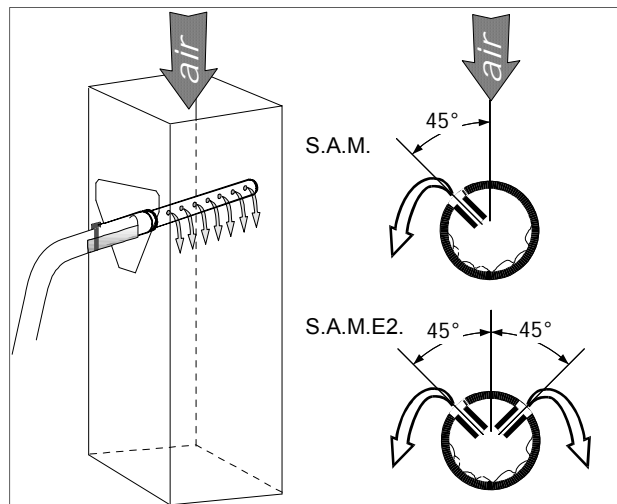


Illustration 8 - Steam Absorption Manifold (S.A.M. or S.A.M.E2) Vertical Duct

Multi Steam System

The Multi-Steam system should be installed in critical locations in air handling systems, particularly where absorption distances are very short, less than 3 feet (900mm), or low air duct temperatures are in effect. The Multi-Steam is custom made to the dimensions of duct or AHU.

Instructions to install Multi-Steam system are described in a specific installation instructions manual enclosed with the Multi-Steam system.

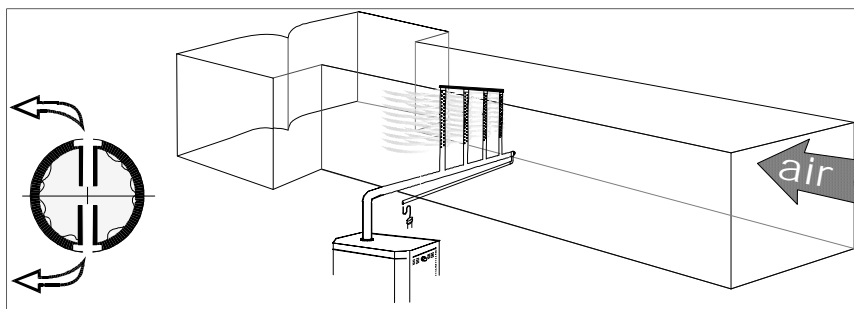


Illustration 9 - Multi Steam System

Positioning S.A.M and S.A.M.E2

Duct Mounting

Steam manifold should be mounted and secured through the side of the air handling unit or duct. Provision should be made for safe accessibility, ideally with an observation light and window. Ensure that the construction of the duct wall is suitable enough to support the steam pipe for the duration of the installation life.

Dimension of hole size in the duct must be as follows:

| Steam Manifold Ø | Hole Size ØA |
|------------------|--------------|
| 1 3/8" (35mm) | 2" (51mm) |
| 2 1/8" (51mm) | 3" (78mm) |


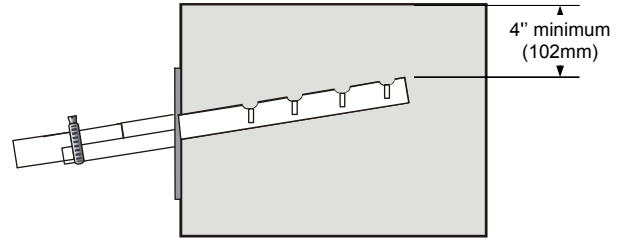


Illustration 10 - Duct Hole Dimensions and Minimum Distance

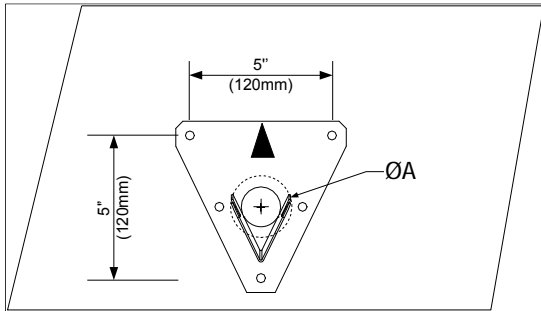

WARNING: Risk of condensing. Ensure that the minimum distance at the end of the manifold is at least 4" (102mm) from the top of the duct.

Recommendation for S.A.M Distribution Pipes

Table 5 - Recommendation for S.A.M Distribution Pipes

| Model | Max Capacity | | Qty | Outlet Diameter in (mm) | Distribution Pipes | | Max Static Pressure | |
|-------|--------------|-------|-----|----------------------------|-----------------------|-----------------------|---------------------|------|
| | lb/hr | kg/hr | | | Min Length in (mm) | Max Length in (mm) | in. of water | (Pa) |
| | | | | | | | | |
| SK302 | 6 | 2.7 | 1 | 1 3/8 (35) | 12 (300) | 24 (600) | 5 | 1245 |
| SK304 | 12 | 5.5 | | | | | | |
| SK306 | 18 | 8 | | | | | | |
| SK310 | 30 | 14 | | | | | | |
| SK314 | 40 | 19 | | | | | | |
| SK320 | 60 | 28 | 2 | 2 1/8 (51) | 32 (750) | 64 (1500) | 5 | 1245 |
| SK330 | 90 | 41 | | | | | | |
| SK340 | 120 | 56 | | | | | | |
| SK360 | 180 | 82 | 3 | | | | | |

For higher static pressure, contact the manufacturer.

Placement of Steam Pipe in Horizontal Duct

1 3/8" (35mm) Diameter Pipe

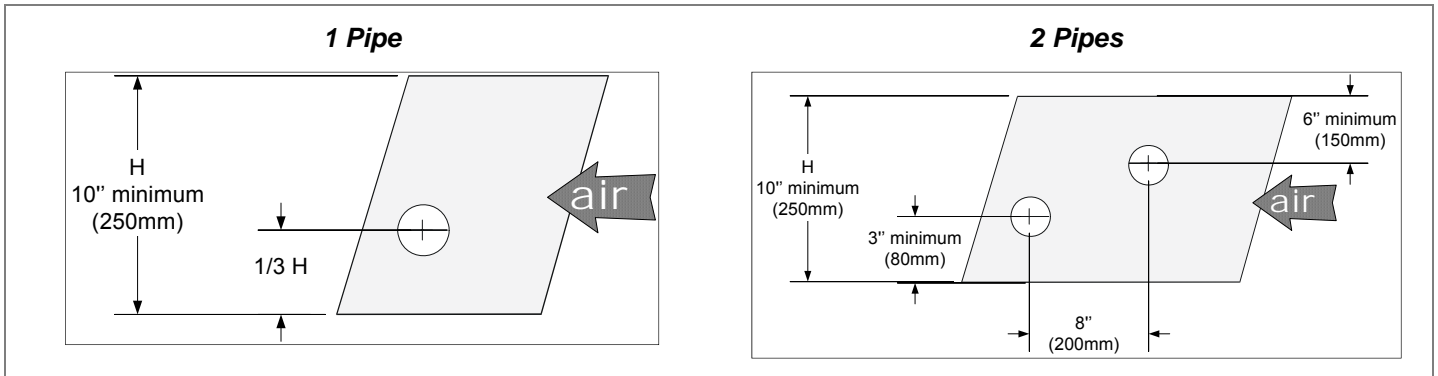


Illustration 11 - 1 3/8" (35mm) Diameter Pipe Placement: Horizontal Duct

2 1/8" (51mm) Diameter Pipe

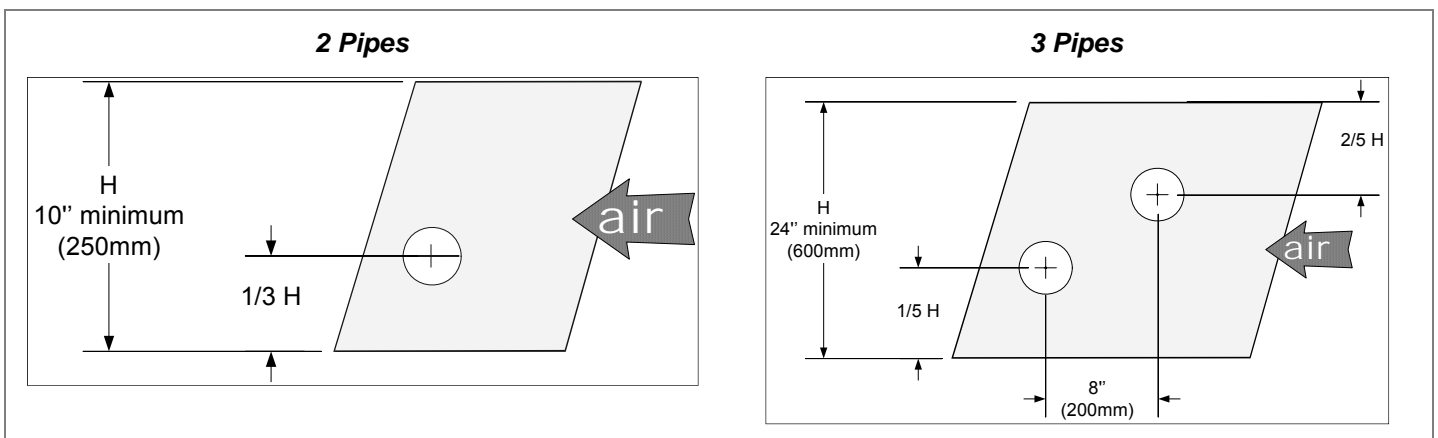


Illustration 12 - 2 1/8" (51mm) Diameter Pipe Placement: Horizontal Duct



Note: 2 1/8" (51mm) steam pipe must be supported on the end by appropriate duct hanger or strap (supplied by others).

Placement of Steam Pipe in Vertical Duct

Eyelet Orientation

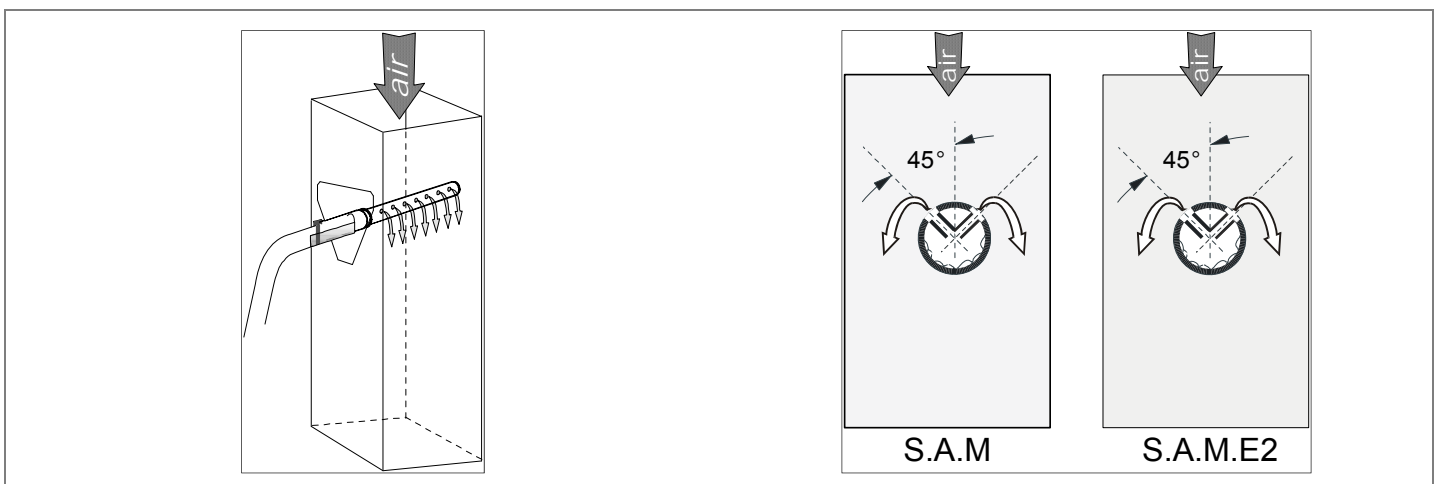


Illustration 13 - Eyelet Orientation

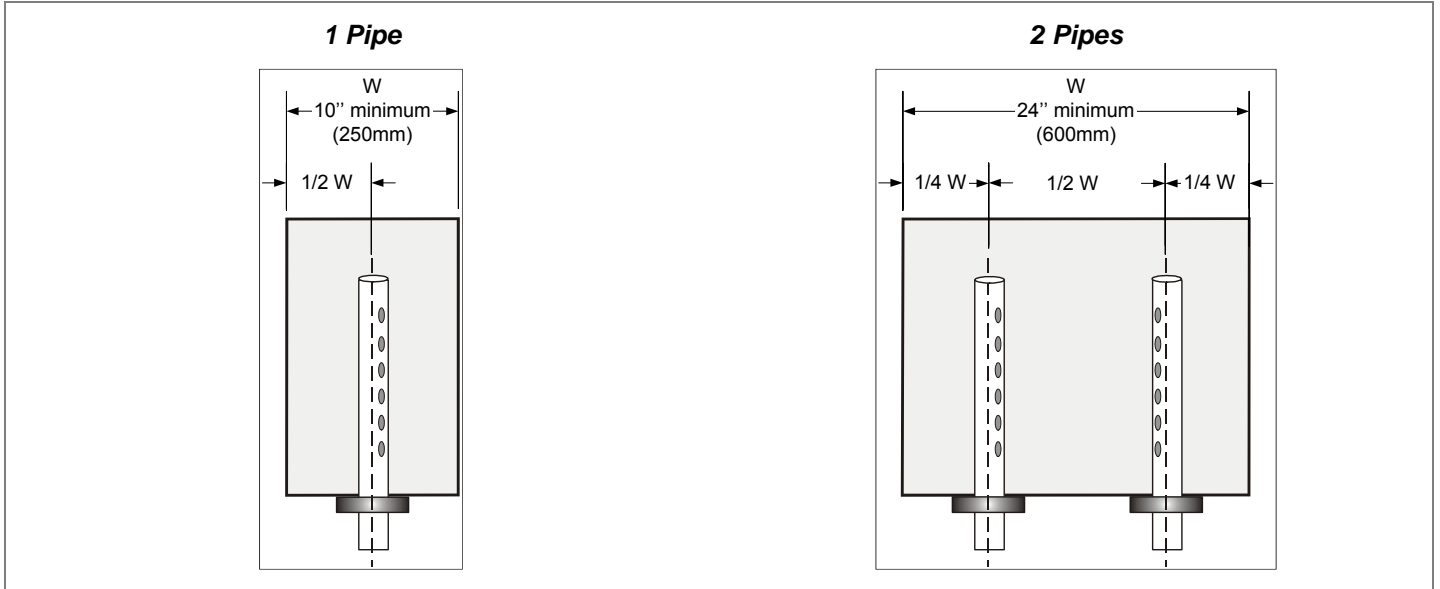
1 3/8" (35mm) Diameter Pipe


Illustration 14 - 1 3/8" (35mm) Diameter Pipe Placement: Vertical Duct

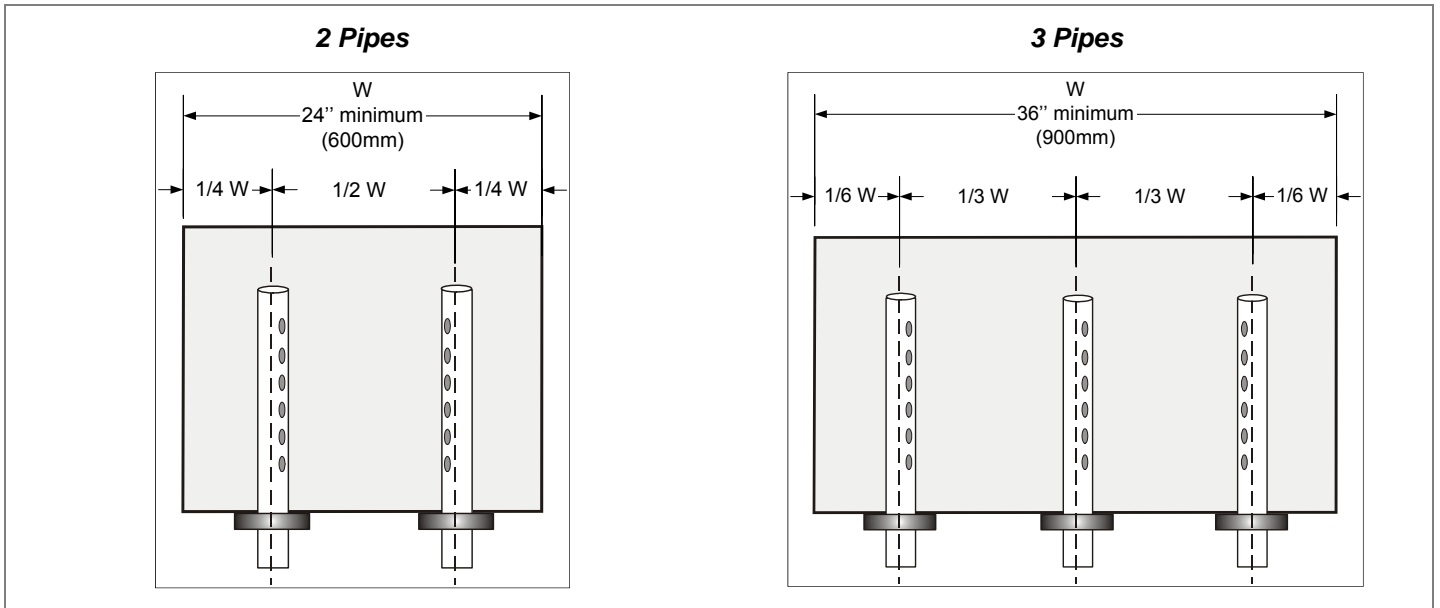
2 1/8" (51mm) Diameter Pipe


Illustration 15 - 2 1/8" (51mm) Diameter Pipe Placement: Vertical Duct

Steam Output Connections

Installation

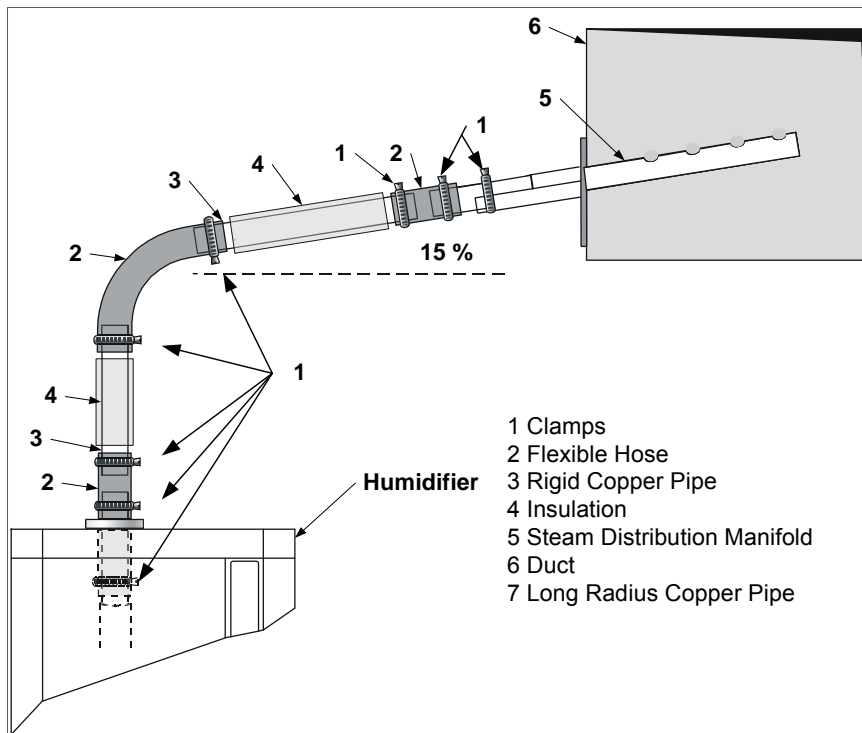


Illustration 16 - Steam Output Connections: Typical Installation

General Recommendations

Follow these general installation rules in order to avoid any condensation accumulation, which can cause severe water accumulation in the duct or a humidifier malfunction.



Caution: Risk of malfunction. Avoid kinks, sags, and areas where condensate can be trapped.

- The slope of the steam hose (rigid or flexible) should not be less than 15% (7 horizontal lengths for 1 vertical length) in order to ensure continuous drainage of condensate back to humidifier or to a steam trap.
- The lowest point of any steam hose or rigid pipe must be the humidifier. If the humidifier cannot be the lowest point of the piping, install a steam trap(s) (S Type) at the lowest point(s) of the steam supply piping. The steam separator (S trap) should be installed higher than the static pressure of the system by at least 2" (51 mm).

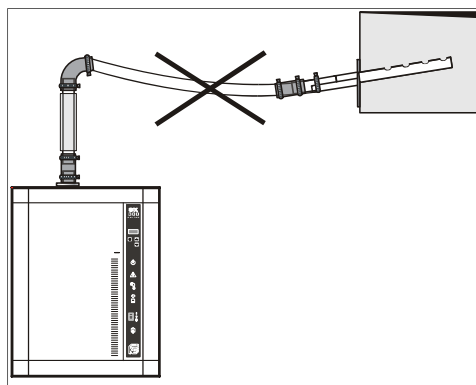


Illustration 17 - Steam Output Connection: Incorrect Installation

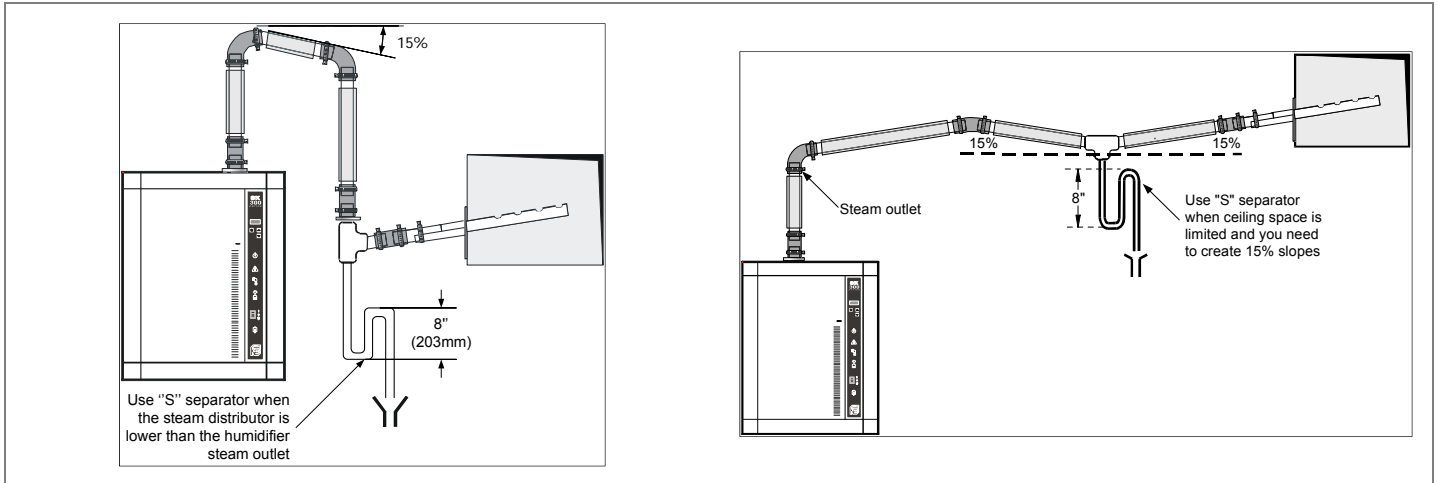



Illustration 18 - Steam Separator (S trap) Installation

- The total length of the steam hose or rigid pipe should not exceed 16 feet (5 meters). Longer runs will result in added condensation losses and may result in system malfunction. Whenever possible, use insulated copper piping. Flexible steam hose should be used for short runs (up to 16 feet or 5 meters) or for interconnecting between the rigid pipes.
- If you are using a rigid copper pipe, use insulation to diminish condensate build-up.

Position of Steam Output



Small Cabinet

| Models | I | J |
|--------|--------------|---------------|
| SK302 | | |
| SK304 | 4 5/16 (110) | 4 13/16 (122) |
| SK306 | | |

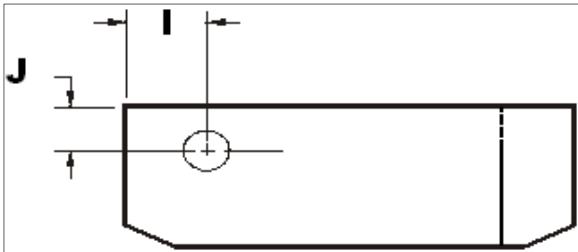


Medium Cabinet

| Models | K | L | M |
|--------|--------------|---------|-------------|
| SK310 | | | |
| SK314 | - | 4 (102) | 5 5/8 (143) |
| SK320 | 5 9/32 (134) | 4 (102) | 5 5/8 (143) |
| SK330 | | | |

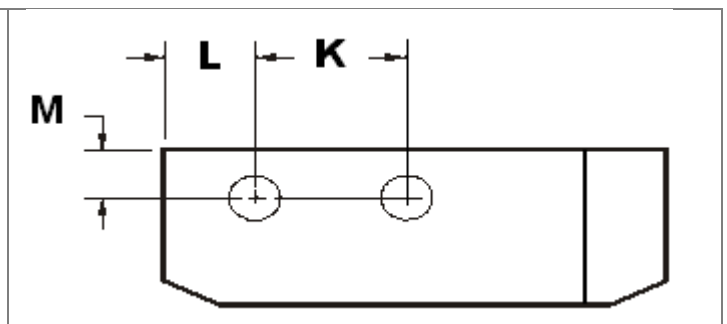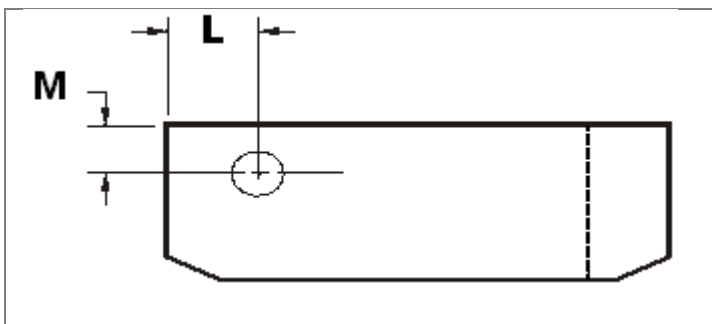

Large Cabinet

| Models | N | O | P | Q |
|----------------|---------|---------|--------------|---------------|
| SK340 SK360 | 7 (179) | 7 (179) | 5 3/16 (132) | 5 11/16 (144) |

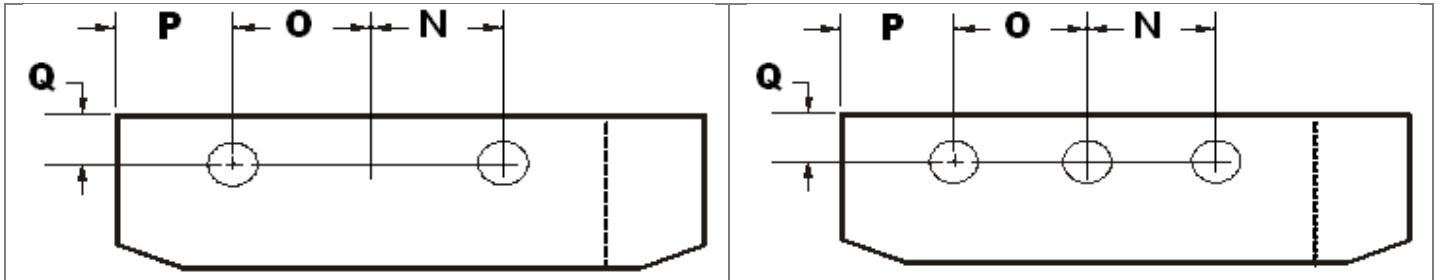

Installation - Humidifier with SDU

- The SDU should be installed in an environment where the air is relatively clean. This will avoid the blower from getting clogged with dust.
- The humidifier should be mounted such that the SDU fan section is at least 78" (2 meters) above the floor.
- A minimum clearance of 18" (0.45 meters) from the ceiling should be allocated to avoid ceiling and wall condensation.
- If additional ventilation is not present, the fan should have a clearance from the ceiling of at least 54" (1.35 meters). Proper ventilation must be observed to avoid ceiling and wall condensation.

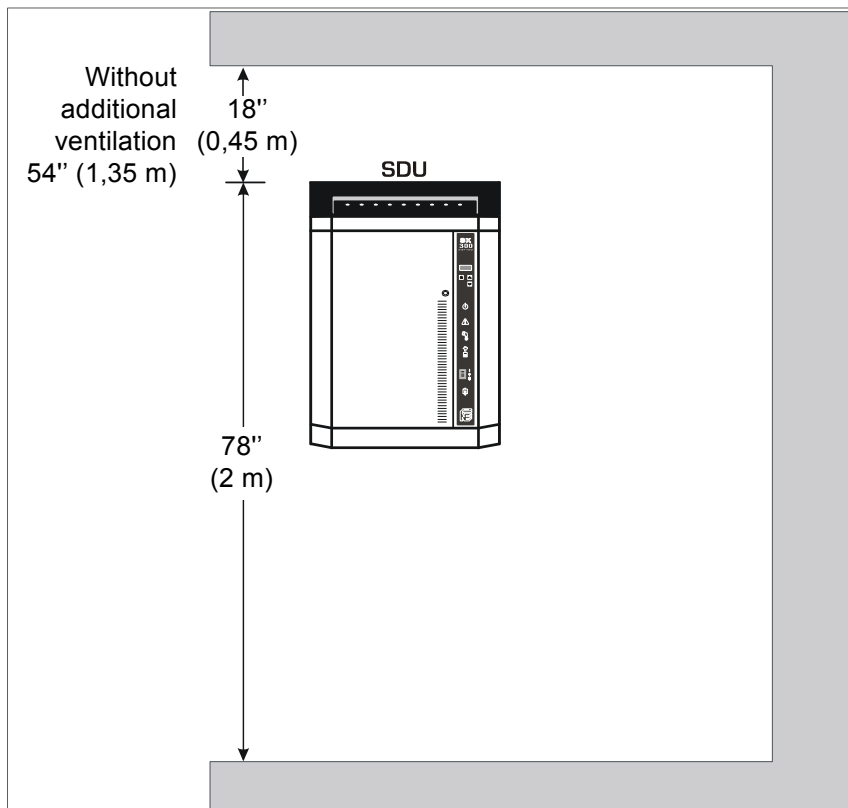


Illustration 19 - SDU mounted on Humidifier

Remote Installation of SDU

The SDU can be installed in a different location from the humidifier (remote SDU). Follow the piping recommendations.

- Mount the SDU to the wall on brackets (not supplied); do not drill mounting holes through the cabinet of the SDU.
- Connect the steam hose(s) to the bottom inlet(s) of the SDU to the top of the steam outlet(s) of the humidifier.
- Secure the hose(s) with the supplied hose clamp.
- Connect the condensate hose to the bottom of the SDU to an open drain.
- Connect the electrical wires from the SDU to the top of the humidifier. Field wiring must conform to local codes.
- The fan of the SDU will operate for a period of four minutes after steam production has stopped to prevent condensation.
- Avoid any obstruction of the ventilation openings on top of the SDU.

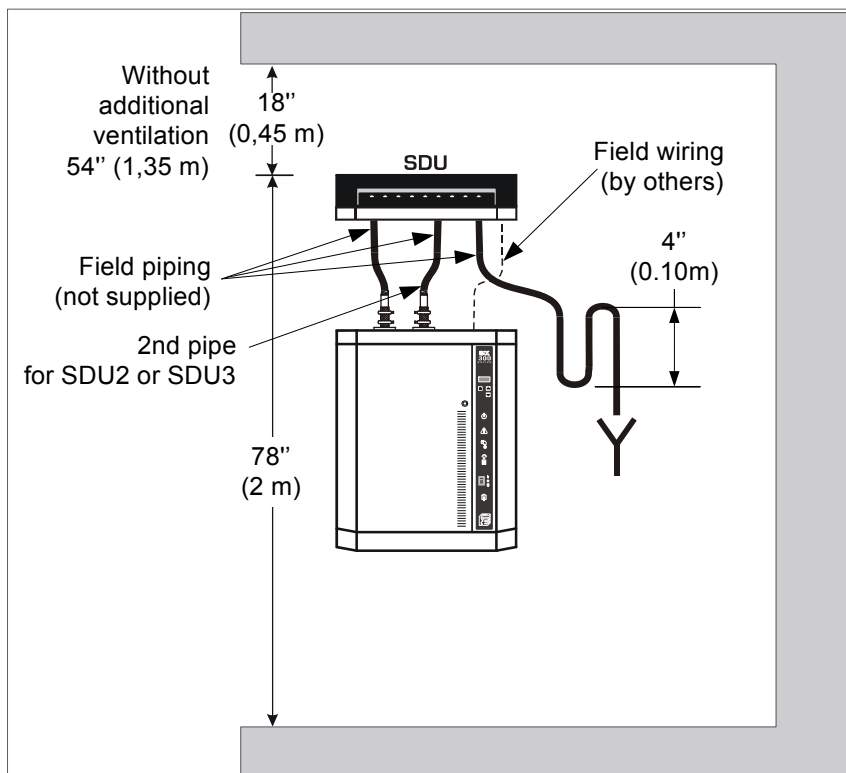


Illustration 20 - SDU Remote Installation

Maintenance of the SDU

Clean the blower if there is an accumulation of dust.

Plumbing Connections



Plumbing Installation should conform to Local and National Codes.
Any installation work must be carried out by suitably qualified personnel.

The SK300 humidifier can operate with soft or hard water. Therefore, for normal operation, pre-treatment of water is not necessary.

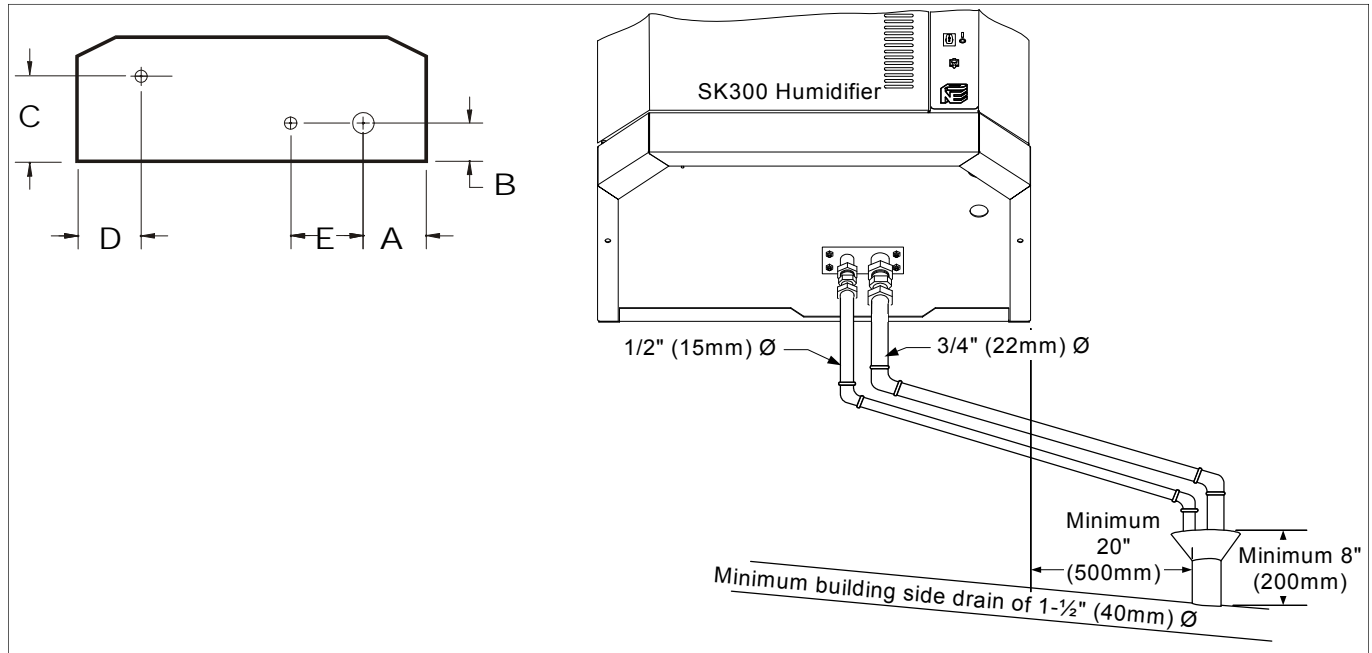


Illustration 21 - Plumbing Connections

Table 6 - Dimensions for Plumbing Connection

| Model | Dimensions inches (mm) | | | | |
|----------------------------------|------------------------|----------|-----------|-----------|----------|
| | A | B | C | D | E |
| SK302 SK304 SK306 | 6 ½ (165) | 2 (51) | 9 ⅛ (232) | 4 ⅛ (105) | 1 ¾ (44) |
| SK310 SK314 SK320 SK330 | 7 ¼ (184) | 1 ¾ (44) | 9 ¾ (248) | 4 ⅛ (105) | 1 ¾ (44) |
| SK340 SK360 | 7 (179) | 1 ¾ (44) | 9 ¾ (248) | 4 ⅛ (105) | 1 ¾ (44) |

Water Supply

- Water Inlet Specifications
 - Inlet water pressure: 10 to 70 psig (0.7 to 4.8 bars)
 - Maximum temperature: 85°F (30°C) maximum
 - 3/8" standard copper water line connection
- A shutoff valve (not supplied) should be installed in the water supply line close to the humidifier to facilitate servicing.
- It is recommended to install a standard water strainer in the water supply line.

Water Connections

Follow the steps below:

1. Connect 3/8" (10mm) copper pipe to the bottom 3/8" (10mm) compression fitting (supplied).
2. Place the swivel top 3/4" (10mm) fitting to the male threaded part of the valve and tighten it with fingers.



Caution: Risk of damage to the valve. Do not use wrench to tighten swivel.

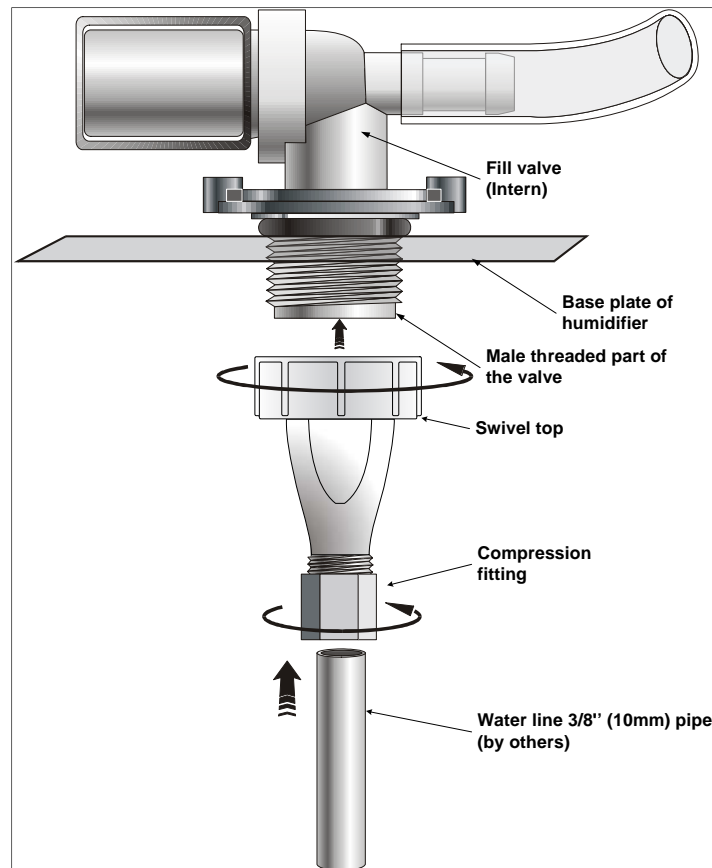


Illustration 22 - Water Supply Connections

Drain Connections

- Evaporation chamber water drain temperature: 140°F (60°C).
- Standard hydraulic compression fittings: a 3/4" (evaporation chamber drain) and a 1/2" (Pan drain).
- 2 hydraulic pipes located under the humidifier (see Illustration 21 - Plumbing Connections) must be connected to the drain pipe.
- Use standard copper hydraulic pipes 3/4" and 1/2".
- Ensure that the drain pipe dimension is sufficient, especially if more than one humidifier is evacuating into the same drain line.



Weather Proof Enclosure Plumbing Connection

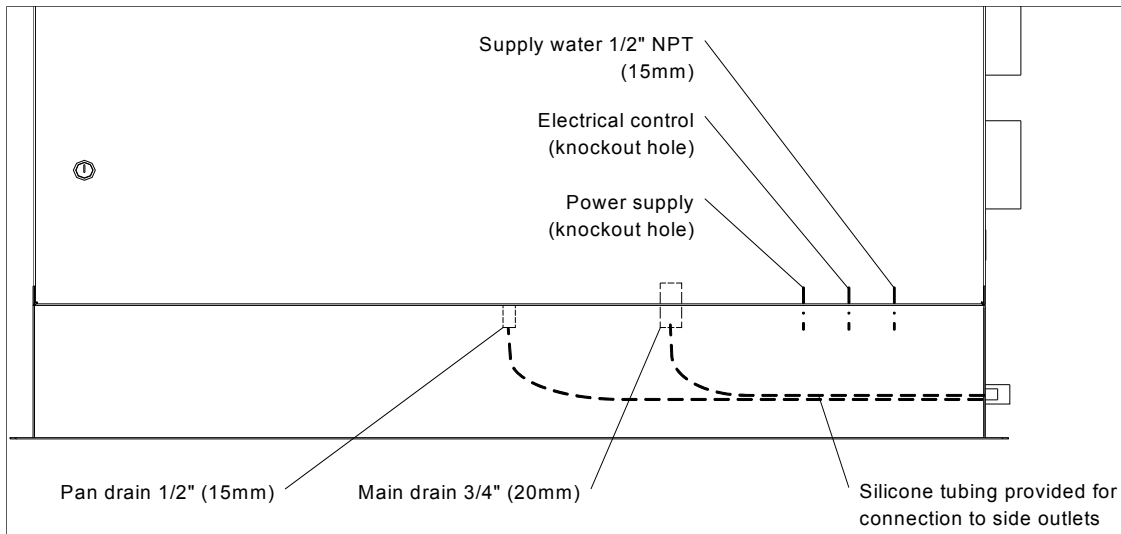


Illustration 23 - Weather Proof Enclosure Plumbing: Front View

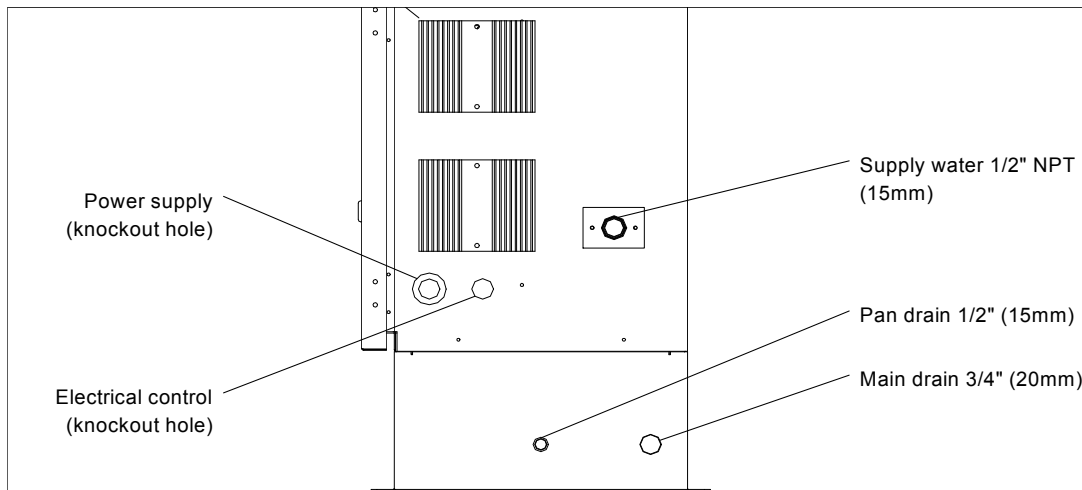


Illustration 24 - Weather Proof Enclosure Plumbing: Side View



Power Supply Connections



Caution: Risk of electric shock. Disconnect the Humidifier from the electric supply before proceeding with the connection.



WARNING: Risk of fire. Do not interchange the power terminal block designated L1, L2 and L3 with low voltage terminal block designated 1, 2 and 3.

- The wiring to the humidifier should be done by a qualified electrician, and should conform to the procedure, regulation and local codes.
- Use only copper conductors.
- An external over current protection and disconnect circuit breaker should be installed on the supply, adjacent to the humidifier.
- A knock-out (not supplied) should be installed at the bottom of the electrical compartment of the humidifier for strain relief of the supply cable.
- Ensure that the size of the wire conductors is appropriate for the current supplied.
- Ensure that each terminal connection is properly secured.
- The ground conductor should be equipped with a ring terminal and should be connected directly to the electrical panel on the indicated location.

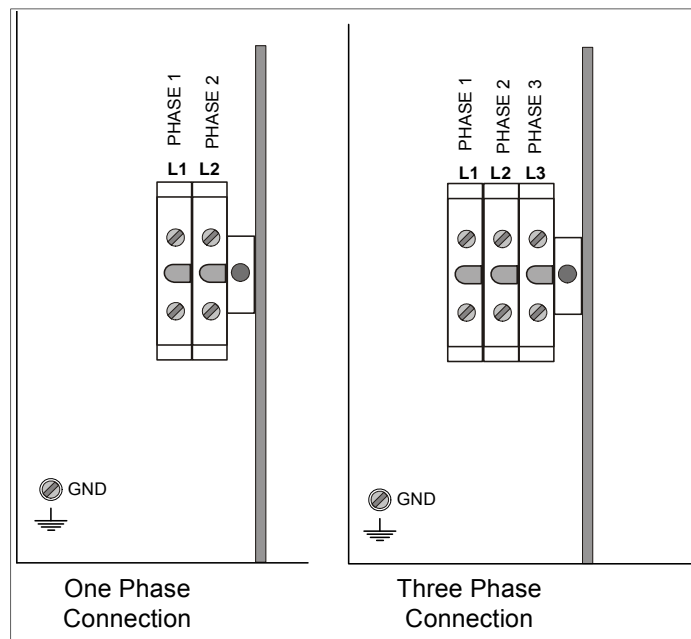


Illustration 25 - One and Three Phase Power Connections

Low Voltage Control Connections

ON/OFF Humidifier

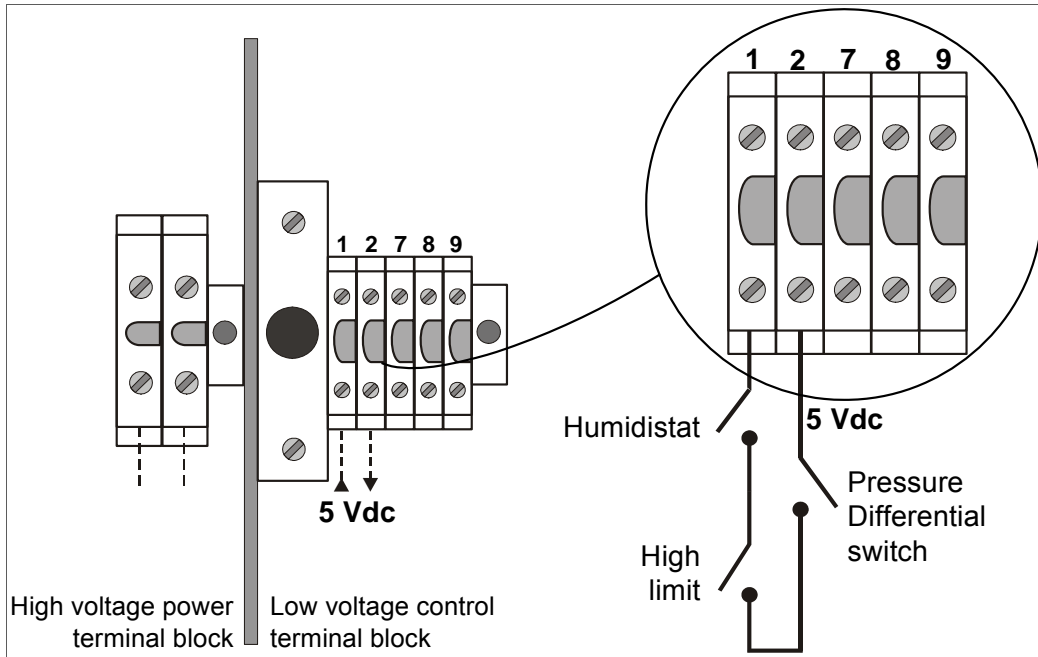


Illustration 26 - Low Voltage Control Connections

Modulating Humidifier

Humidity Control by Humidistat (External Mode)

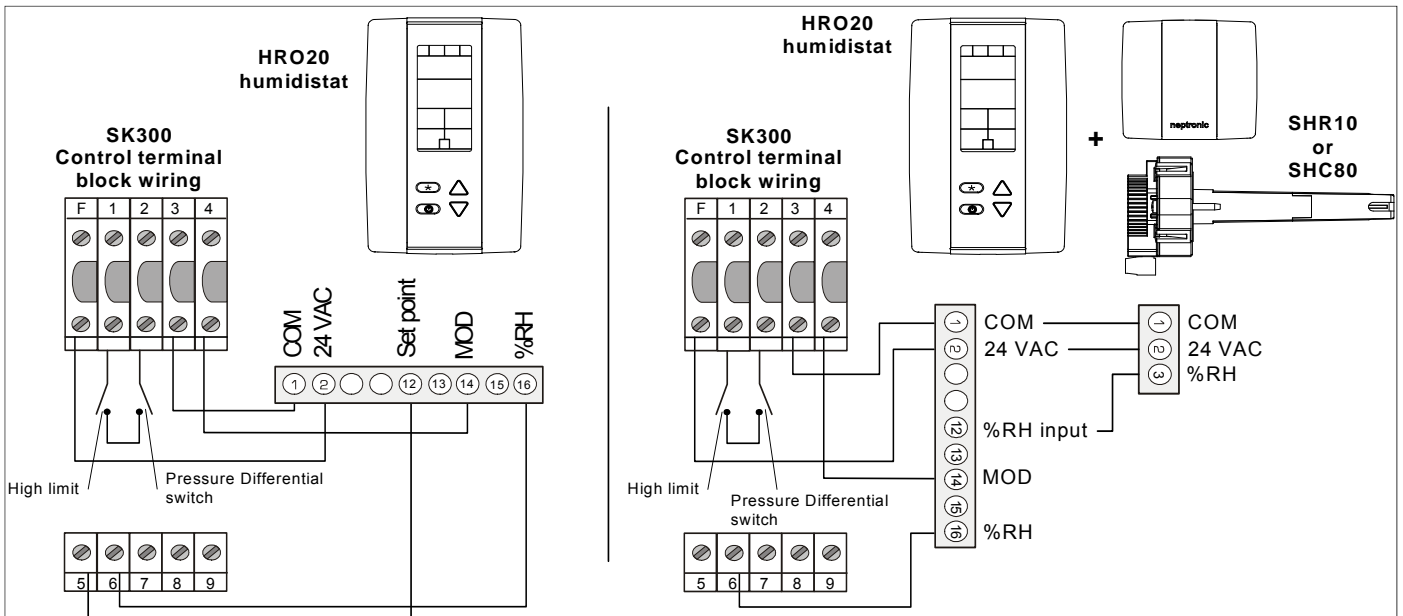


Illustration 27 - Connection to HRO20 humidistat or HRO20 with remote humidity sensor (SHR10 or SHC80)

Humidity Control by Humidifier (Internal Mode)

Humidity controlled by humidifier, using SHR10 or SHC80 as space sensor.

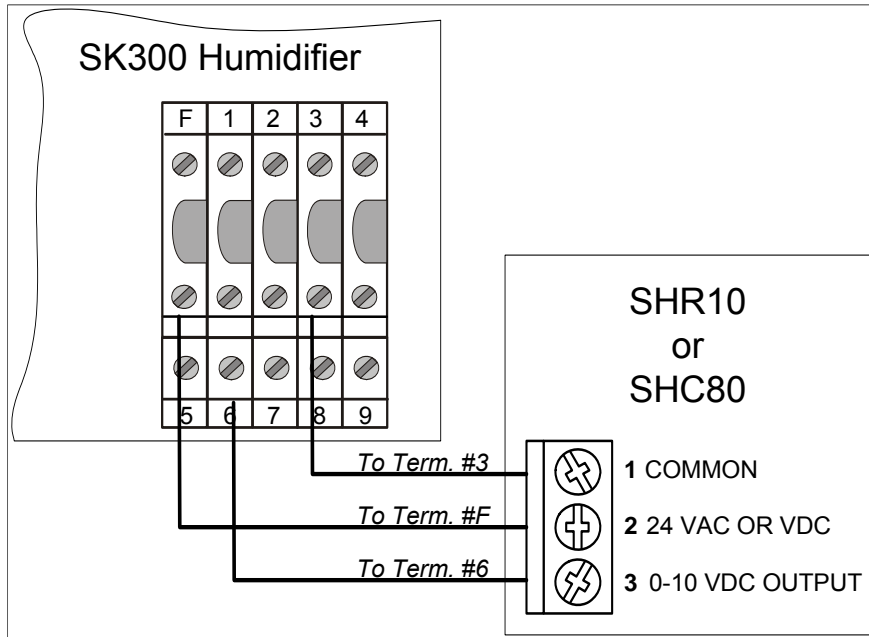


Illustration 28 - Humidity controlled by humidifier with SHR10 or SHC80 as space sensor VAV system with humidity controlled by humidifier, using SHC80 as Hi-limit duct sensor and SHR10 or SHC80 as space sensor.



Note: If an interlock is not used, a jumper must be installed between terminal F and 5.

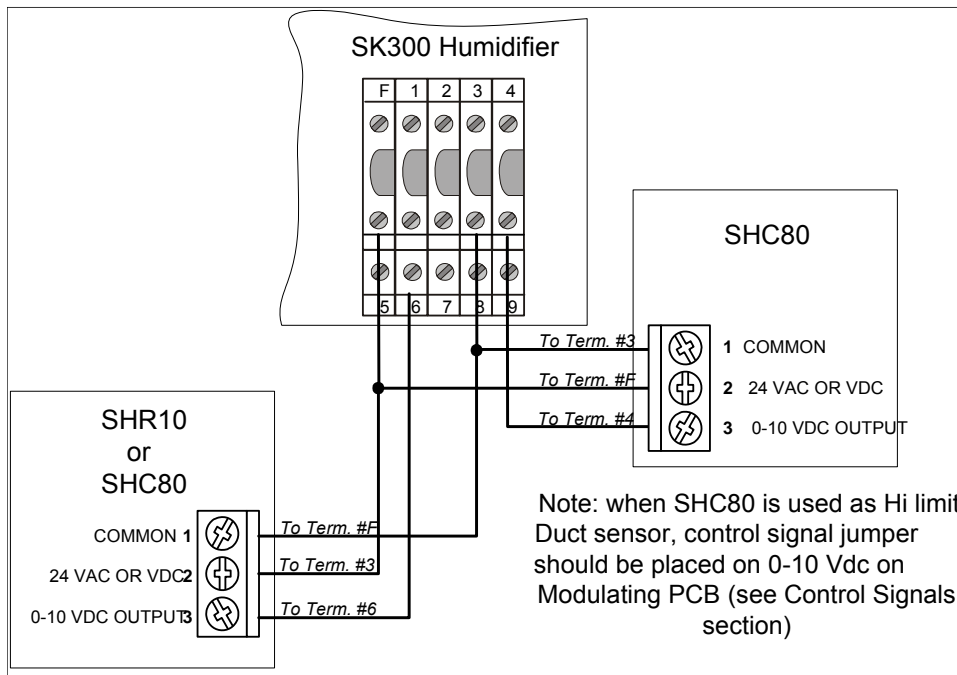


Illustration 29 - VAV system with humidity controlled by humidifier using Hi limit sensor and space sensor

Humidity Signals (Internal Mode)

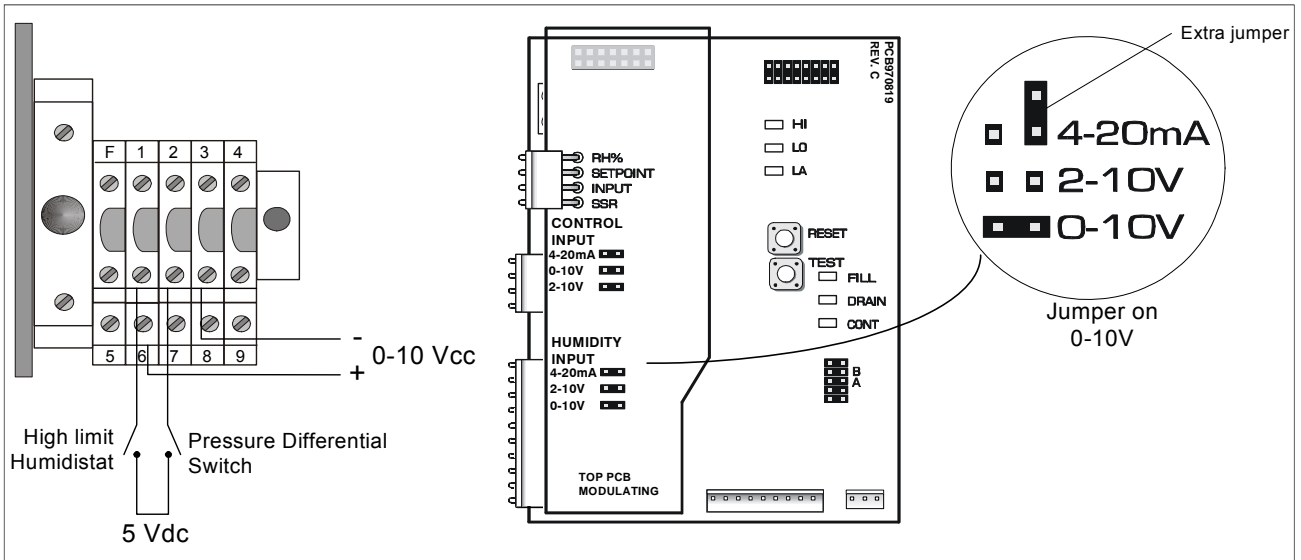
Humidity Signal 0-10 Vdc


Illustration 30 - Humidity Signal 0-10 Vdc

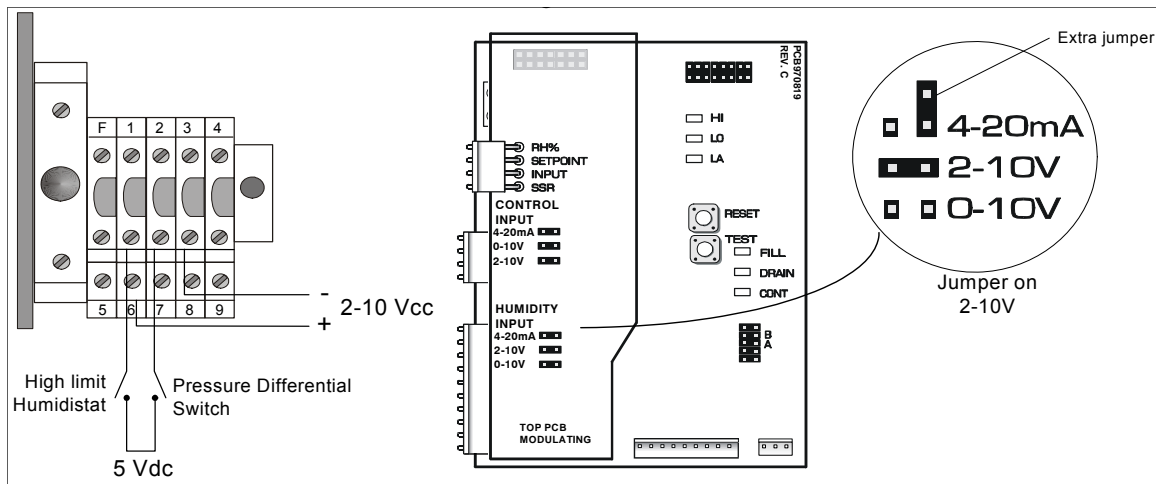
Humidity Signal 2-10 Vdc


Illustration 31 - Humidity Signal 2-10 Vdc

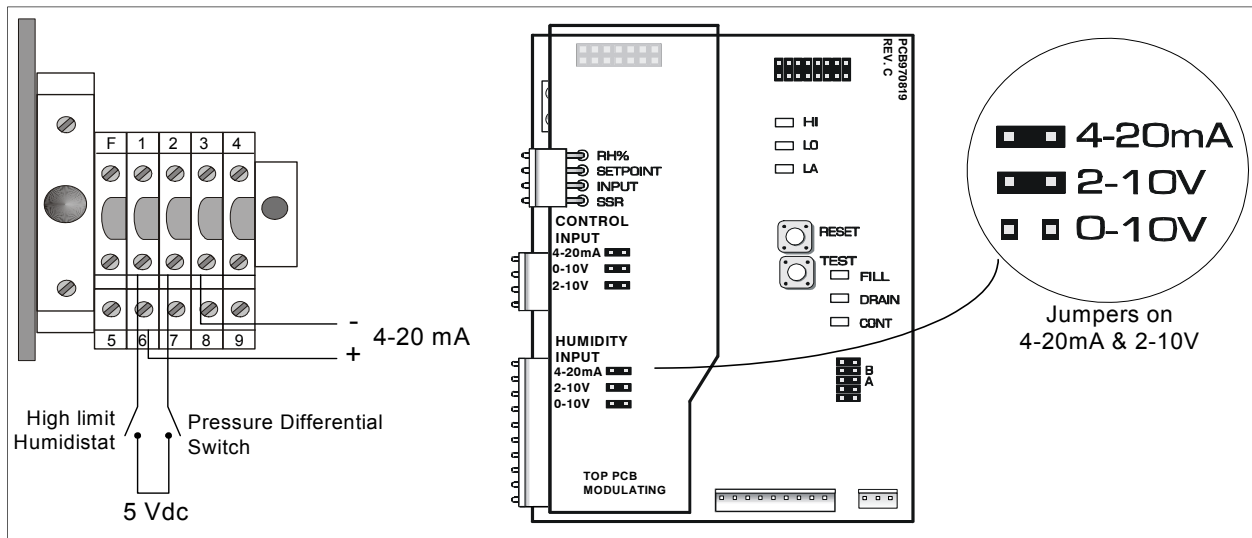
Humidity Signal 4-20 mA


Illustration 32 - Humidity Signal 4-20 mA

Control Signals

Control Signal 0-10 Vdc

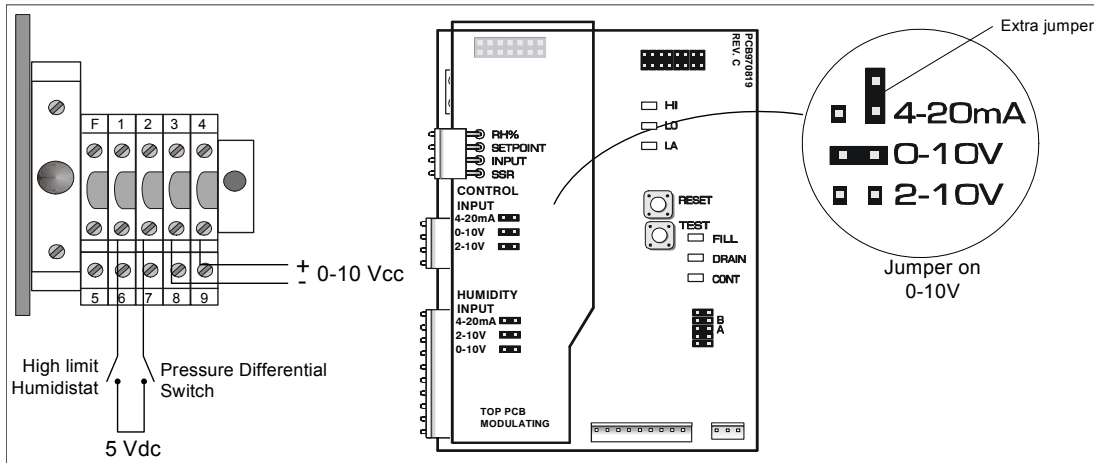


Illustration 33 - Control Signal 0 to 10 Vdc

Control Signal 2-10 Vdc

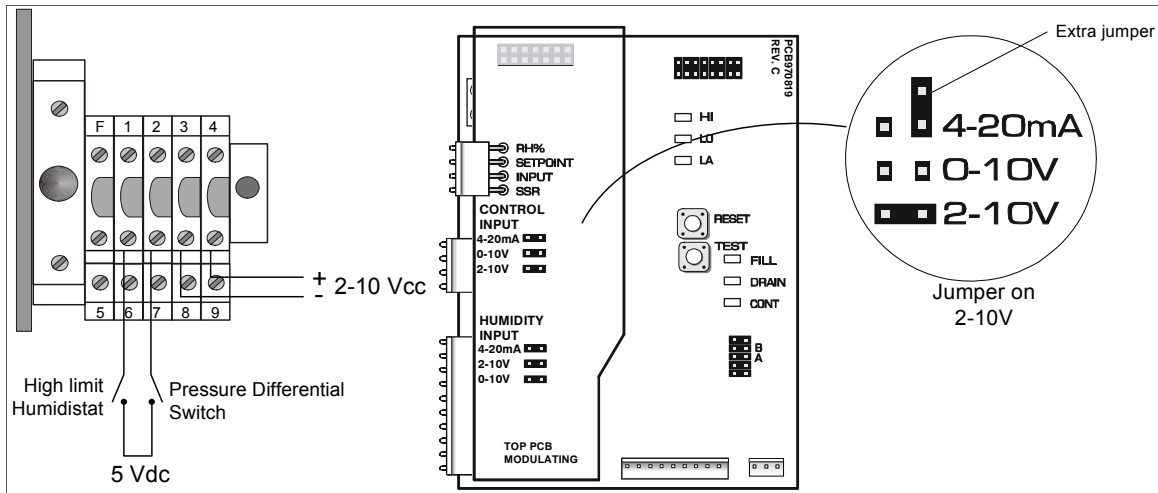


Illustration 34 - Control Signal 2 to 10 Vdc

Control Signal 4-20 mA

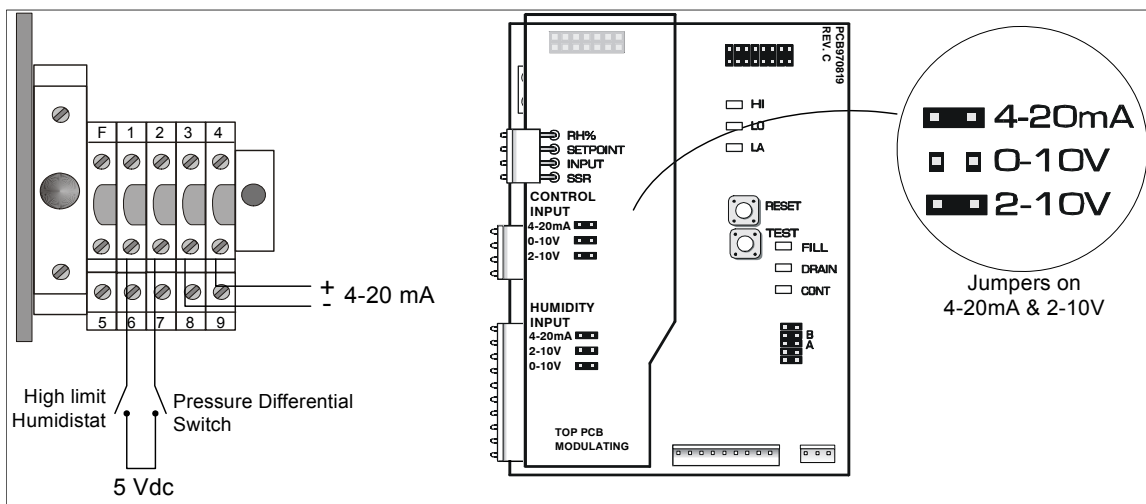


Illustration 35 - Control Signal 4-20 mA

Common Alarm Connections

- A volt free contact is provided in the form of both a Normally Open and Normally Closed contact that will switch on, in the event an alarm is activated on the SK300 humidifier.
- Wherever possible, it is recommended to use the Normally Closed contact. This contact will open in the event of a humidifier fault.
- These contacts should be used to switch a low voltage, ideally 24V, with a switching current of no more than 3 Amps.

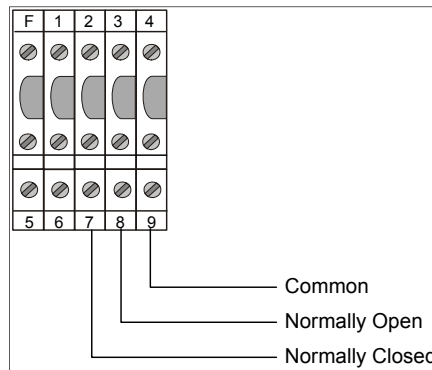


Illustration 36 - Common Alarm Connections

Controls Placement (Steam Dispersed into a Duct or AHU)

A typical humidifier control system should include the following along with the humidifier:

- A wall or return duct humidistat
- A high limit duct humidistat
- An air proving switch

Placement of these devices is critical to the proper operation of the overall system.

- The return duct humidistat must always be located before any outside air intake, in order to ensure accurate sensing of the air from the humidified space.
- Alternatively, a room humidistat can be used. The room humidistat should be located on an inside wall or column. It should not be near any discharge air from supply ducts or sources of heat or cold.
- The airflow switch must be positioned to accurately open on a loss of air flow, to prevent the humidifier from running when there is no air to absorb humidity.
- The high limit humidistat must be positioned far enough, 6" minimum (1.8m), downstream of the steam dispersion manifold(s) to prevent it from getting wet, but still allows it to accurately prevent over humidification of the duct that could result in condensation.

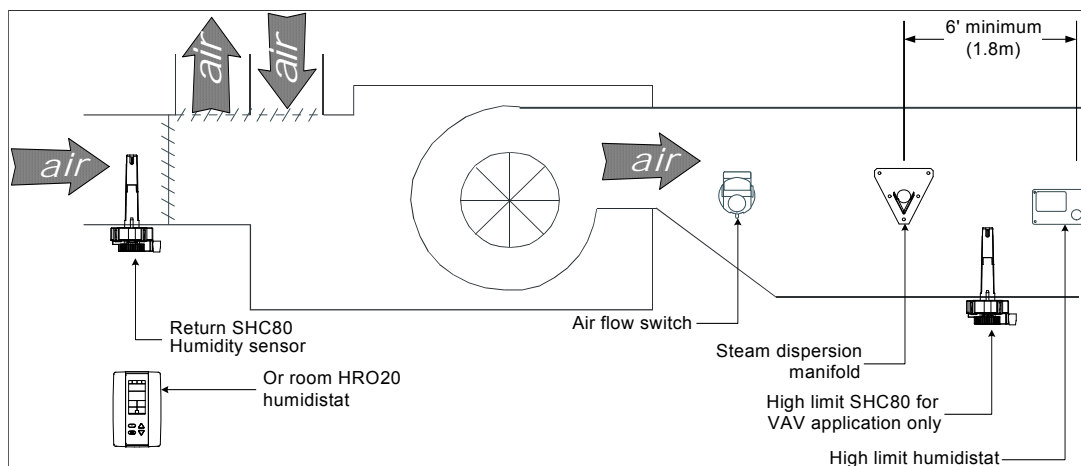


Illustration 37 - Controls Placement (Steam Dispersed into a Duct or AHU)

Display

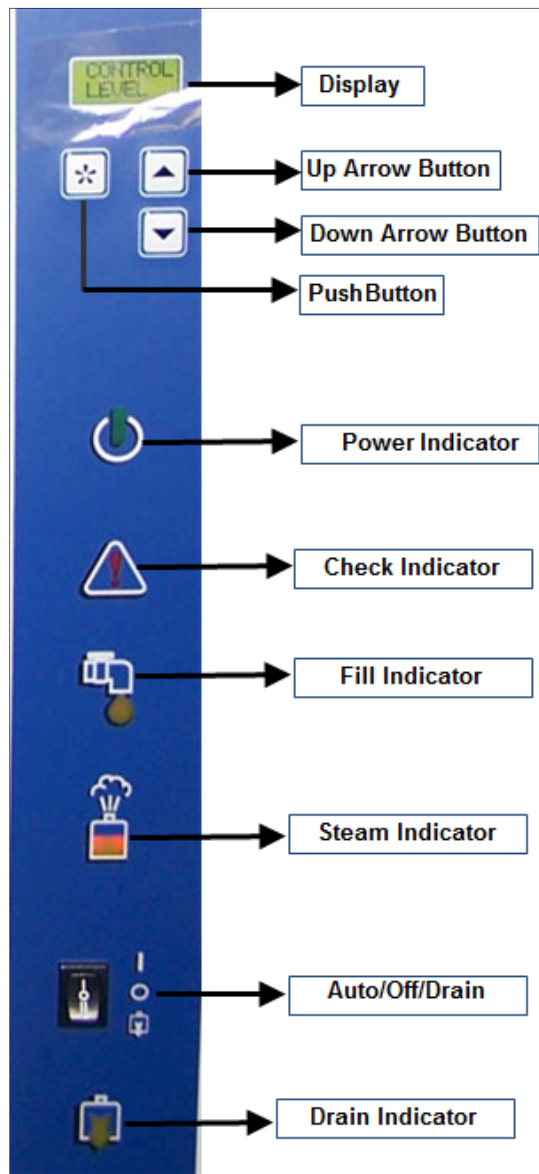











Illustration 38 - Display Features: Front Panel

Front Panel

The following are the display features of the Front Panel and their description:

Table 7 - Humidifier Front Panel Display Description

| Options | Description |
|--|---|
| Alphanumeric Display  | The Alphanumeric display indicates all the operation parameters and error messages. |
| Push/Power Button  | The Push button is used to access program mode. |
| Up and Down Arrow Buttons   | ▲ - Used to increase the control parameters of the humidifier. ▼ - Used to decrease the control parameters of the humidifier. |
| Power Indicator  | ☀ - The humidifier is powered by electricity and the switch is at the AUTO position. O - The humidifier is disconnected from the power supply. |

| Options | Description |
|---|---|
| Check Indicator  | ☼ - The CHECK indication is normally off. It will be activated as a warning during abnormal conditions of operation. ☼ (blinking) - If the CHECK indication is on, it means that maintenance is required. The running hours have exceeded the Service hours. See Service section on page 30. O - No abnormal conditions of operation. |
| Fill Indicator  | ☼ - Indicates that the water supply (fill) valve is open. O - Indicates that the water supply (fill) valve is closed. |
| Switch Auto/Off/Drain  | Auto - Position AUTO (I) Humidifier will generate steam based on demand from the humidistat. OFF - Position OFF (O) - Humidifier will shut off. DRAIN - Position DRAIN Humidifier will stop operating and the evaporation chamber will drain the water out. This will be done typically at regular service. |
| Drain Indicator  | ☼ - Indicates that the drain pump is on, either as a result of an automatic drain cycle or because the front panel switch is manually set to DRAIN. O - Indicates that the drain pump is off. |

Modes – Description

OFF Mode

When the rocker switch is in the OFF position, the display shows the model of the humidifier and the program version number as follows:

NEP 3.4
SK310M

Scroll Mode

When the rocker switch is in the AUTO position, the display scrolls the following information every 6 seconds:

Table 8 - Scroll Mode Display Description

| Display and Description | Notes |
|--|---|
| RH 25% DCT 68% Display Space and Duct Relative Humidity readings | Only on modulating humidifiers (suffix M). If no High limit Duct sensor is installed, the second line is left blank. |
| LB/HR 30 Quantity of steam produced by the humidifier | The actual output of the humidifier at that moment is 30 lb/hr. |
| ALARM LEVEL Low water level | Below this water level, the humidifier shuts off and the water supply valve is activated until sufficient level is reached. |
| CONTROL LEVEL Water level is controlled | The water supply valve is activated below this level. |
| HIGH LEVEL Water at maximum level | The water supply valve is automatically deactivated. |


Diagnostic Mode

When the following conditions occur, the diagnostic messages override the scrolling information:


Table 9 - Diagnostic Mode Display Descriptions

| Display | Description |
|------------------------|--|
| <i>NO DEMAND</i> | Modulating humidifier: No analog signal to the humidifier. |
| | On/Off humidifier: <ul style="list-style-type: none"> Humidity level has exceeded the setpoint of the humidistat Humidity level has exceeded the setpoint on the high limit humidistat Airflow is not detected by the air pressure switch |
| <i>SAFETY OPEN</i> | <ul style="list-style-type: none"> Humidity level has exceeded the setpoint on the high limit humidistat Airflow is not detected by the air pressure switch (modulating humidifier only) |
| <i>DRAIN CYCLE</i> | The humidifier is in the automatic drain mode. |
| <i>CONTACT DELAY</i> | 15 second delay for the power contactor to be activated. |
| <i>OVERHEATED</i> | The temperature inside the container has exceeded the boiling temperature. The humidifier has shut off automatically. |
| <i>PROBE DEFECTED</i> | The water level sensor is not operational. The humidifier has shut off automatically. |
| <i>NO LEVEL</i> | Water has not reached the level probe. |
| <i>FOAMING CYCLE</i> | The Anti Foam Energy Conservation (AFEC) has detected foam. The humidifier drains for a few minutes and returns to normal operation. |
| <i>DRN/PROB BLOCK</i> | The humidifier drains but the water level does not decrease, the humidifier has automatically shut off. |
| <i>VERIFY RH SENS</i> | Signal from either SHR10 or SHC80 used as space sensor is lower than 0.49 Vdc to terminal # 6 of humidifier. There might be a connection problem or a defective sensor. |
| <i>VERIFY DCT SENS</i> | Signal from SHC80 used as Hi limit duct sensor is lower than 0.49 Vdc to terminal # 4 of humidifier. There might be a connection problem or a defective sensor. |

Programming Mode

To access the Programming Mode, push the  button. To move to the next program function, push the button twice.


Use the  and  buttons to make any selection.

The changes made in the Program Mode are saved into a non-volatile memory. When the humidifier is in the menu driven Program Mode, the normal operation of the humidifier is halted. To resume normal operation, exit the menu program mode by pressing the  button until the alphanumeric display is clear.

1. "SETPOINT OUT 30%"

Default: Out 30%
 Range: 00 to 100%
 Out: Output setpoint to HRO20
 Int: Internal

To enable the humidifier display, perform the following steps:

- Press the  and access the RUNNING function, Step 5, "Running 0645 Hrs. The RUNNING message appears.
- Press and hold the TEST button located on the main PC board inside the electrical compartment for 10 seconds.
- Release the TEST button and then press the RESET button on the same main PC board. Setpoint is now displayed on the humidifier display.
- If the output is selected, the setpoint is sent from the humidifier to the humidistat HRO20.
- If SHR10 or SHC80 is connected with humidifier, select Internal, as this will allow you to set up RH setpoint directly from the humidifier.



- f. To switch between the output and internal setpoints, press and hold the TEST button located on the main PC board inside electrical compartment till the value changes.

2. "SETPOINT VAV OFF"



Default: OFF (Duct humidity control disable)

Range: OFF (Duct humidity control disable), High limit duct humidity setpoint value (65%)

This option appears only if you have selected Internal at Step 1, "Setpoint out 30%. Set the VAV value setpoint.

If the setpoint VAV is set to OFF, humidity signal from the VAV duct will not be considered. If the setpoint VAV is set, the humidity output will be controlled by both the space demand and high limit duct humidity signal.

To add a setpoint VAV value, perform the following steps:



- a. Press and hold the TEST button located on main PC board, inside the electrical compartment until OFF disappears.
- b. Select the VAV setpoint desired value by using the  and  buttons on the control panel.

3. "PROP BAND 3%"

Default: 3%

Range: 3% to 9%

This option appears only if you have selected Internal at Step 1, "Setpoint out 30%. Select the desired value for proportional deadband.

Select the desired proportional band value by using the  and  buttons on the control panel.

4. "DRAIN 8 HRS"

Default: 4 hours

Range: 1 to 24 hours



Increment: 1 hour

Select the frequency for drain cycle. Generally, the harder the water is, higher the drain cycle frequency should be. Drain cycle setting does not affect the AFEC system.

5. "RUNNING 0645 HRS"

Number of running hours (information display only)

Indicates the number of hours the humidifier has been running since the last servicing.

After every service, reset the number of hours of operation to zero by pressing the   buttons simultaneously for 15 seconds. This will reset the number of hours of operation to zero.

6. "SERVICE 1000 HRS"

Default: 1000 hours

Range: 400 to 1500 hours

Increment: 100 hours

Set the number of hours of operation before the humidifier calls for servicing. Generally, the harder the water is, the lesser the number of hours of operation before servicing can be initiated.

7. "LOCK ON 80% PUR"

Default: 100 %

Range: 0% to 100%

Increment: 1%

Select the output span, the rate at which the humidifier delivers 80% of the maximum rated output at full demand.

Control P.C. Board

The Printed Circuit board designated "PCB970819" is common to all SK300 series humidifier, ON/OFF or modulating humidifier. This PC board is equipped with an advanced microprocessor, which controls all the humidifier functions. The Printed Circuit board which is directly connected onto the main PC board is installed only on modulating model (suffix M).

Main P.C. Board

There are three water level L.E.D.s on the upper right hand side. They indicate the relative water height as sensed by the water level sensor.

- If **HI** is illuminated, the water supply valve shuts off.
- If **LO** is off, the evaporation chamber filling is ordered, and water supply valve opens.
- If **LA** is off, no water is detected by the water level sensor, the power to the elements is disconnected.

The three status L.E.D.s at the center left side operate as follows:

- **FILL** - Indicates that the water supply valve is feeding water.
- **DRAIN** - Indicates that the drain pump empties the container.
- **CONT** - Indicates that the power is supplied to the elements and the humidifier is producing steam.

The **TEST** button should be used when commissioning the humidifier; this will initiate a pre-programmed start-up cycle. The start-up cycle cleans the supply water and the evaporation chamber (see Start-up Procedure section). This button also enables the setpoint control of the humidistat to humidifier display).

To access the Diagnostic Mode, press the  and  buttons simultaneously. This option is available only on Modulating model. **RESET** button enables to bypass of start-up sequence.

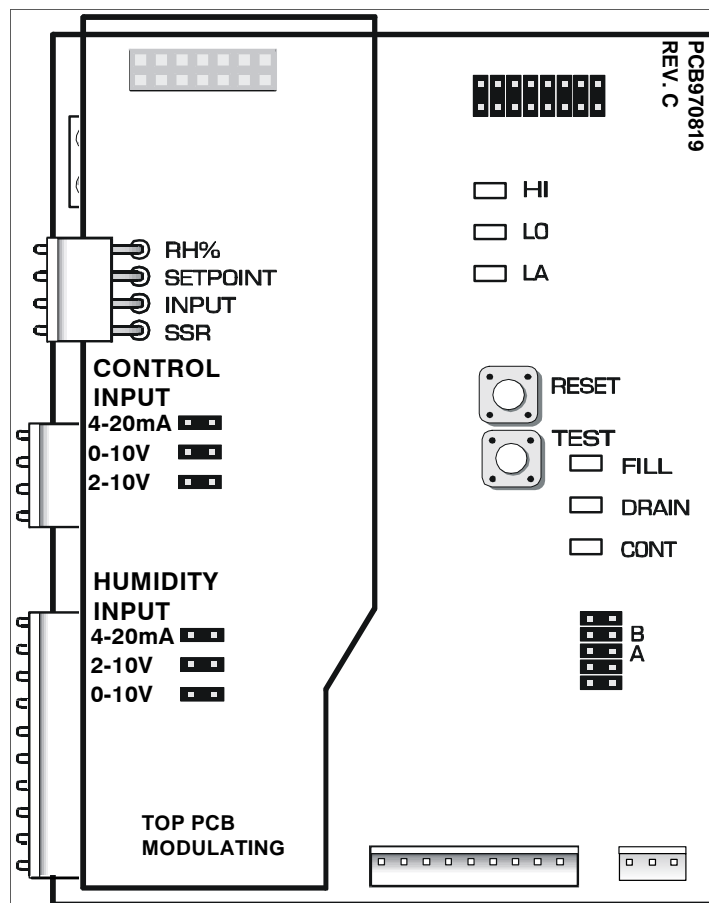


Illustration 39 - Main PC Board



Modulating P.C. Board

- The three jumpers at the center of the PC board (Control Input) are used for selecting the incoming control signal. For more information, refer to the Control Signals section.
- The three jumpers at the bottom of the PC board (Humidity Input) are used for selection of the incoming humidity signal. For more information, refer to the Humidity Control by Humidifier (Internal Mode) section.

Start-up Procedure

We recommend to strictly following this Start-up procedure in order to avoid any anomaly resulting from wrong cleaning of the components. In case of problem or discrepancy, see the Troubleshooting section.


1. Ensure that the mechanical, electric and plumbing connection are done and secured.
2. Ensure that the low voltage control circuit is done and correct.
3. Turn the water shutoff valve on (outside the humidifier) and check that the drain connections are connected to the main drain line with sufficient diameter.
4. Turn the power on to the humidifier from the circuit breaker disconnect switch. The POWER indicator should be on.
5. Push the TEST button located on the main PC board. This PC board is located in the electrical compartment.
This will start up a pre-programmed start-up cycle. This start-up cycle will test functions of the humidifier and will flush out any dirt in the humidifier and supply lines. This cycle lasts for about one hour.
 - o The front panel rocker switch will not affect the performance of the start-up cycle.
 - o In the case of modulating humidifier, there must be a demand signal of at least 50% for the start-up cycle to operate correctly.
 - o To bypass the start-up cycle at any time and proceed to normal operation, press the RESET button located on the main PC board.
6. The front panel rocker switch may be left in the AUTO position during the start-up cycle. This will result in normal operation of the humidifier as soon as the start-up cycle is finished. Your humidifier is now fully operational.

Service


The humidifier requires a regular maintenance service to ensure efficient and trouble-free running. Regular service involves cleaning the evaporation chamber and its components manually. Generally, frequency of cleaning can range from 2 months to once in a year. However, the cleaning frequency depends on the following specific factors:

- Quality of water
- Frequency of automatic drain cycles
- Demand placed on the humidifier

All SK300 humidifiers are programmed for a 1000 hours of operation. This is a default factory setting.

To view the number of hours the humidifier has run and the number of service hours, press the menu  button on the front panel several times till you view the information on the digital display.



At the end of 1000 hours of operation, the red LED  on the front panel starts blinking on off continuously. This indicates that the humidifier is due for service. The humidifier operates for an additional 50 hours and the LED continues to blink on and off. At the end of the 50 additional hours, the red LED stays on continuously. Though the humidifier continues to run, it is important to service the humidifier at the earliest.

Clean the Evaporation Chamber

Cleaning the Evaporation Chamber involves the following steps:

Stage 1 - Shut down electrical supply and disassemble the humidifier





Stage 2 - Remove and clean the evaporation chamber

Stage 3 - Reassemble the evaporation chamber

Stage 4 - Restart the humidifier

Pre-requisite for cleaning the Evaporation Chamber

Before you commence the cleaning procedure, ensure that the evaporation chamber is cool and comfortable to handle as the evaporation chamber and its contents can be extremely hot and can cause burning. If it is hot, allow the evaporation chamber to cool by initiating a drain cycle.


1. Press the rocker switch to the drain down position . The humidifier initiates a drain cycle and empties the evaporation chamber.
2. Press the rocker switch upward to the Auto (I) position . The humidifier fills the evaporation chamber with water. The Fill  light is illuminated.
3. Press the rocker switch to drain down position  again to empty the chamber.

At the end of the drain cycle, check the temperature of the evaporation chamber. To check the temperature, open the front door of the humidifier and touch the chamber with the back of your hand. If it is cool enough to handle, shut down the electrical supply. If not, repeat the drain cycle till it is cool enough. If further drain cycle is not required, press the rocker switch to OFF (O) position .

Stage 1 - Shut down electrical supply and disassemble the humidifier




Caution: Risk of electric shock. Shut down the electric supply of the humidifier. Disconnect the power at the External Breaker/Fused Disconnect before commencing servicing

1. Press the Power  button on the control panel to switch off the humidifier.
2. Remove the power supply to the humidifier at the disconnect switch or the breaker.
3. Disconnect the power connector to the heating elements.

| Model | Method |
|---------------|--|
| SK302 to 306 | Unscrew the connector |
| SK310 to SK36 | Squeeze the locking ears of the high voltage connector and pull it apart |

4. Remove the clip-on level sensor board located on the chamber cover.
5. Disconnect the wire connector to the high temperature safety cut-out .
6. Loosen the steel clamps that hold the steam hose in place with a 5/16" (8mm) nut driver or a standard screw driver.
7. Loosen the compression brass connectors using an adjustable wrench and a 11/16" (17mm) key. Unscrew the brass nut and slide it back.

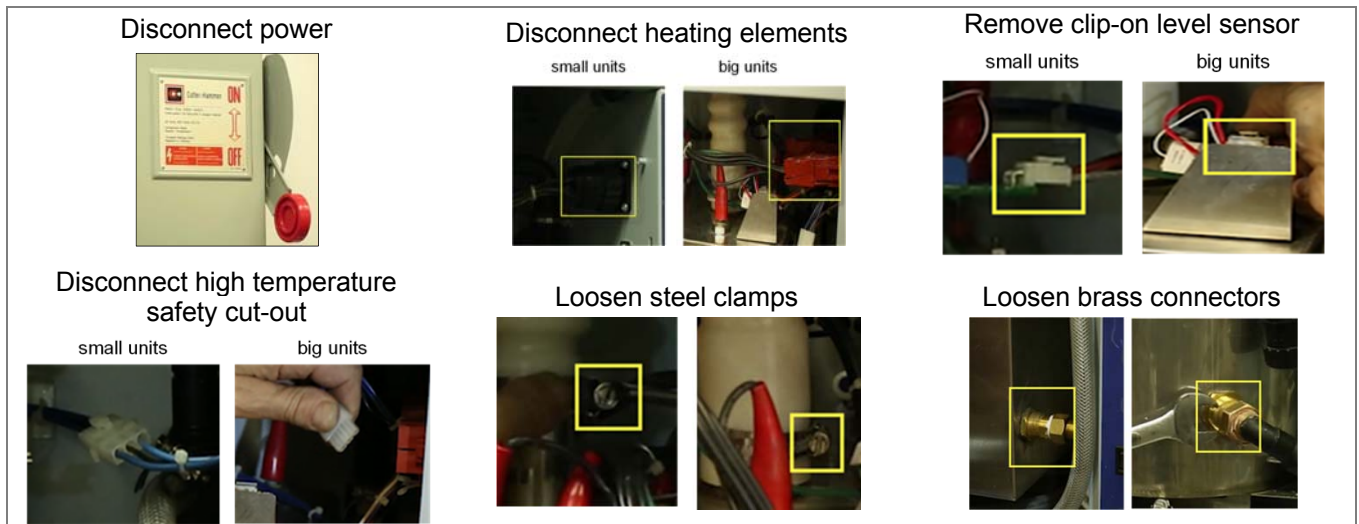

Stage 2 - Remove and clean the evaporation chamber

1. Slide out the boiling chamber.



The evaporation chamber still contains few inches of water, tilt it slightly to ensure that you do not spill this water on yourself.

Ensure that your footing is secure when lifting the evaporation chamber. Evaporation chambers in large humidifiers such as SK340 and SK360 may weigh more than 35 lbs (15 kgs). Seek assistance from another person while removing the chamber.

2. Uncouple the clamp connectors.

| Model | Method |
|---------------|--|
| SK302 to 306 | Unlatch the three latches located around the evaporation chamber. |
| SK310 to SK36 | Turn the four or eight latches located around the evaporation chamber. |

3. Open the lid along with the elements inside.



Do not clean the heating element. They are self-cleaning. Any mineral accumulation breaks off and falls to the bottom during the course of operation.

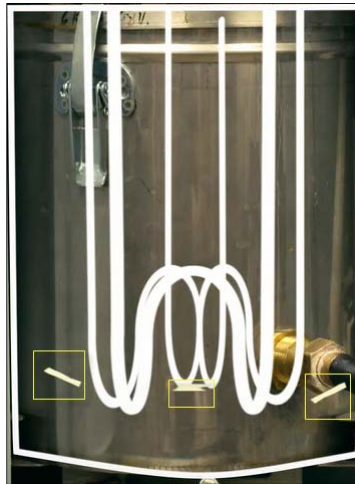


Illustration 40 - Metal deposit dislodge during operation

- Remove the residue that has accumulated inside the chamber.
 - Rinse the chamber with water only. Do not use any acid or vinegar.
 - Do not scrape off the walls of the chamber.
 - Ensure that the fill drain aperture is not blocked.
4. Check the gasket and ensure that it is in good shape. Replace the gasket if it is dry, torn or hardened.
 5. Replace the lid back on the chamber.



Water Level Sensor

The water level sensor is encased in a chamber that protects the sensor. If the sensor has been operating correctly prior to the service shut down and has not displayed the *PROBE DEFECTED* and *OVER HEATED* errors, do not clean the sensor.

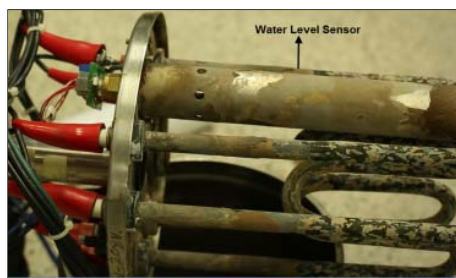



Illustration 41 - Water Level Sensor

If the sensor has displayed the *PROBE DEFECTED* and *OVER HEATED* errors, then clean the sensor. To clean the sensor, perform the following steps:

1. Remove the chamber from the unit by unscrewing the two screws that hold the chamber. These screws are located on the chamber itself.
 2. Remove the chamber carefully without touching or damaging the water level sensor.
 3. Clean the sensor using a soft cloth.
-  The water level sensor is covered by a thin layer of Teflon. Any scratch or damage to this layer results in non functioning of the humidifier.
4. Clean the protection chamber in the same way as the evaporation chamber.

- Reattach the chamber to the cover by tightening the screws on top of the cover.

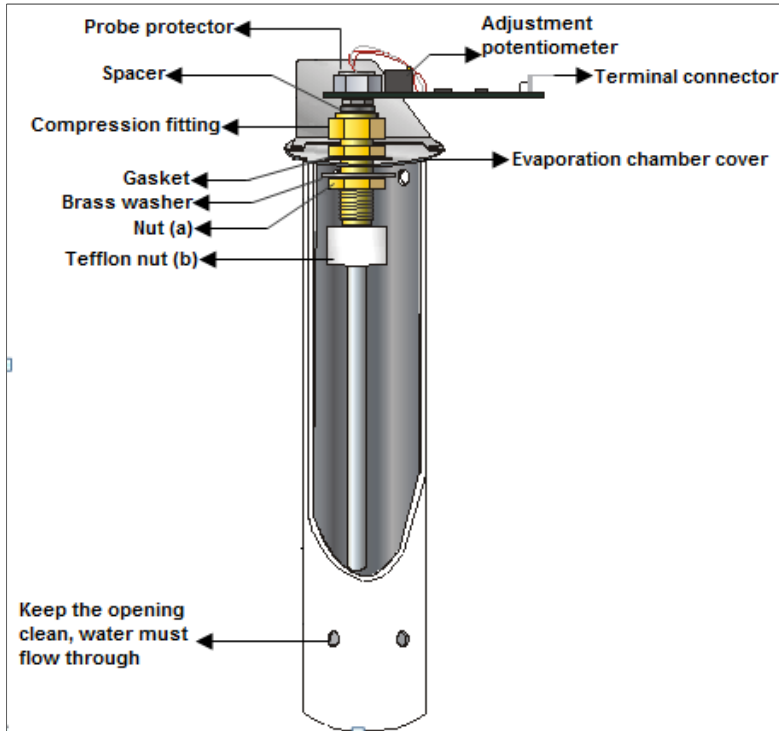


Illustration 42 - Water Level Sensor and Protection Chamber


Stage 3 - Reassemble the humidifier

- Mount the boiling chamber back into the unit.
- Tighten the compression brass connectors.
- Reconnect the steam hose.
- Reconnect the clip-on level sensor.




Reconnect the clip-on level sensor only when the power is disconnected. If, for any reason, you did not connect the level sensor during the reassembling, ensure to disconnect the power first, and then reconnect.



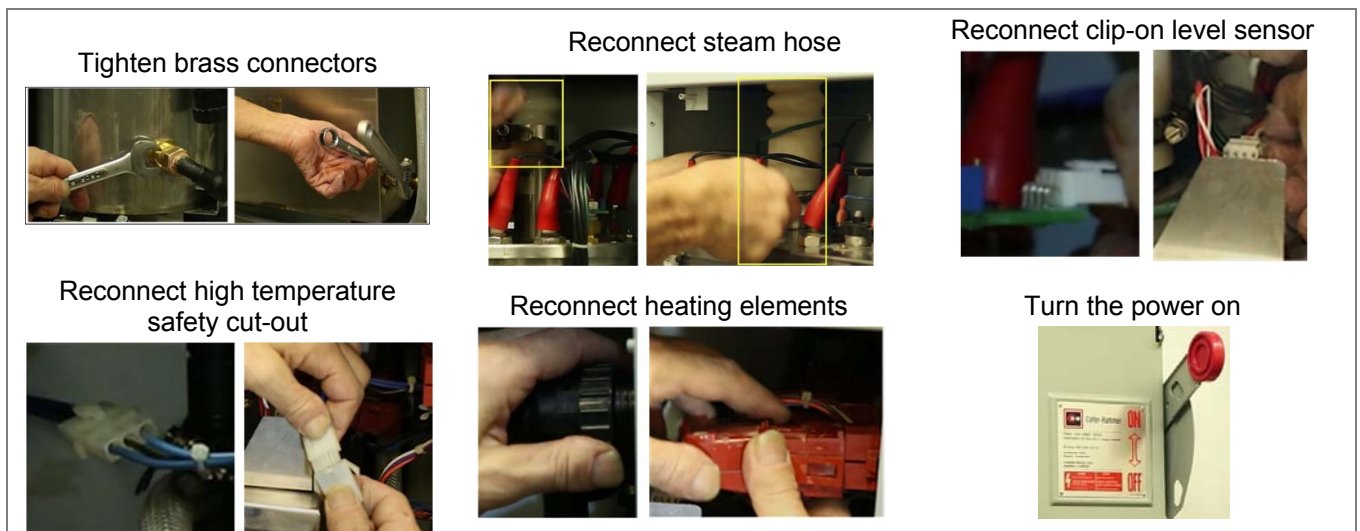


- Reconnect the high temperature safety cut-out wire.
- Reconnect the heating elements.
- Turn the power back on at the disconnect switch or the breaker

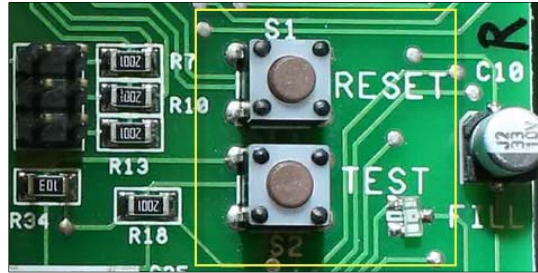

Stage 4 - Restart and reset the humidifier

1. Power up the humidifier.
2. Reset the humidifier by pressing the TEST and RESET buttons on the main PC board.



3. When you press the TEST button, the humidifier goes into the drain mode. The drain LED  illuminates indicating the drain mode. Then press the RESET button.
4. The humidifier now operates in the automatic mode and fills with water as soon as it detects a demand for humidity.
5. To stop the red LED check light from blinking after the servicing, do the following:
 - a. Press the menu  button till the RUNNING HRS display appears.
 - b. Press the  and  buttons simultaneously for 20 seconds or until the hours are zero on the display.
6. Set the drain cycles for every four hours of operation. This is the factory default setting and is recommended for city water.
 - Press the menu  button till the DRAIN HOURS appears on the display.

After the water boils for four hours in the chamber, it is laden with minerals and solutions. This affects the humidity output and the efficiency of the humidifier. So, dilute the boiling water by initiating a drain cycle.

Exploded View and Bill of Material

Exploded View

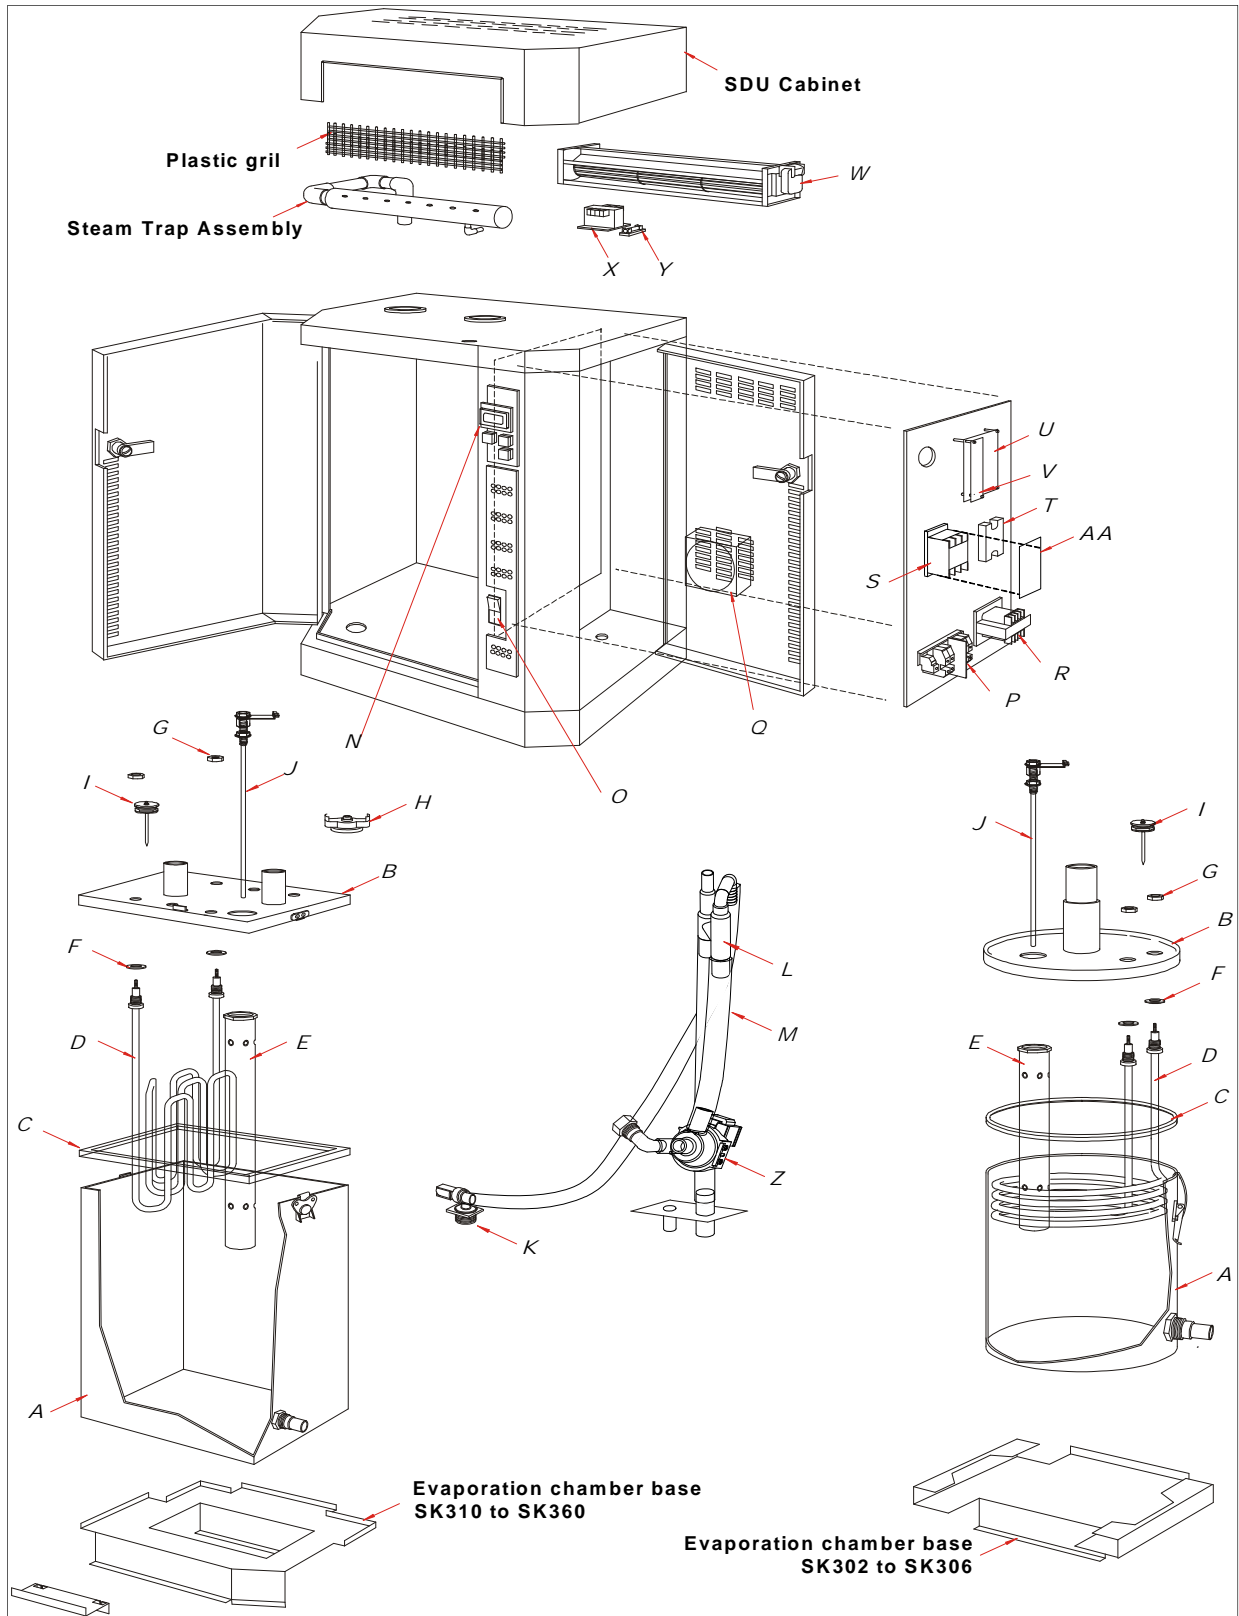


Illustration 43 - Exploded View of Humidifier

Bill of Material

Table 10 - Model Description and Part Numbers

| Item | Description | Model | Part number |
|------|--|---|--------------------|
| A | Container of evaporation chamber | SK302 to 306 | SW CONTSMA-ASSY |
| | | SK310 to SK330 | SW CONTMED-ASSY |
| | | SK340 & SK360 | SW CONTLAR-ASSY |
| B | Cover of evaporation chamber | SK302 to 306 (1 phase) | SP 4018-M |
| | | SK304 to 306 (3 phases) | SP 4019-M |
| | | SK310 & SK314 | SP 4183A |
| | | SK320 & SK330 | SP 4183B |
| | | SK340 | SP 4186 |
| | | SK360 | SP 4185A |
| C | Evaporation chamber gasket | SK302 to 306 | SP 1008 |
| | | SK310 to SK330 | SP 1021 |
| | | SK340 & SK360 | SP 1022 |
| D | Heater element | See Table 11 - Model, Heater Element, Transformer, and Voltage Description | |
| E | Level sensor chamber | SK302 to 306 | SP 4196-M |
| | | SK310/314/320/340 | SP 4197-M |
| | | SK330 & SK360 | SP 4198-M |
| F | Washer (elements) | SK302 to SK360 | SP 1005 |
| G | S/S hex. Jam nut (elements) | SK302 to SK360 | SP 2330 |
| H | High temperature switch (klixon) | SK302 to SK360 | SP 3035 |
| I | Foam sensor | SK302 to 306 | SW FOAMSM-ASSY |
| | | SK310/314/320/340 | SW FOAMMED-ASSY |
| | | SK330 to SK360 | SW FOAMLG-ASSY |
| J | Water level sensor | SK302 to 306 | SW PROBSM-ASSY |
| | | SK310/314/320/340 | SW PROBMD-ASSY |
| | | SK330 & SK360 | SW PROBLAR-ASSY |
| K | Water supply valve | SK302 to SK360 | SP 6007 |
| L | Fill and drain trap assembly | SK302 to 306 | SW TRAPSMA-P |
| | | SK310 to SK330 | SW TRAPMED-P |
| | | SK340 & SK360 | SW TRAPLAR-P |
| M | Silicone tubing 1/2" | SK302 to SK360 | SP 1023A |
| | Silicone tubing 3/4" | | SP 1023B |
| | PCV tubing 1/2" | | SP 1027 |
| N | Alphanumeric display | SK302 to SK360 | SW SK300DISPL-ASSY |
| O | "AUTO/OFF/DRAIN" rocker switch | SK302 to SK360 | SW SKSWITCH-ASSY |
| P | Terminal block and high voltage connectors | SK302 to SK360 | - |
| Q | Cooling fan | SK302 to SK360 | SP 3007 |
| R | Transformer | Refer to Table 11 - Model, Heater Element, Transformer, and Voltage Description | |
| S | Contactator | Refer to Table 11 - Model, Heater Element, Transformer, and Voltage Description | |
| T | Solid State Relay | 50 A | SP 3102 |
| | | 90 A | SP 3103 |
| | | 125 A | SP 3105 |
| U | Main Printed Circuit Board | SK302 to SK360 | NW SK300MAIN-TEST |
| V | Modulating Printed Circuit Board | SK302 to SK360 | NW SK300MODULSS |
| W | SDU fan | SDU I | SW FANSDU1-RET |
| | | SDU II | SW FANSDU2-RET |
| | | SDU III | SP 3010 |
| X | Transformer | Refer to Table 11 - Model, Heater Element, Transformer, and Voltage Description | |

| Item | Description | Model | Part number |
|------|-----------------|-----------------|-------------|
| Y | Fuse inside SDU | SDU 1 and SDU 2 | SP 5105 |
| | | SDU 3 | SP 5106 |
| Z | Drain pump | SK302 to SK360 | SP G4101 |


Table 11 - Model, Heater Element, Transformer, and Voltage Description

| Model | Voltage | D Heater element | R Transformer | S Contactor | X SDU Transformer |
|-------|---------|---------------------|------------------|----------------|----------------------|
| SK302 | 240V/1~ | SW 5932 | SP 3310 | SP 3029 | SP 3312 |
| | 208V/1~ | SW 5933 | SP 3308 | SP 3029 | SP 3305 |
| | 480V/1~ | SW 5934 | SP 3321 | SP 3029 | SP 3329 |
| | 600V/1~ | SW 5935 | SP 3341 | SP 3029 | SP 3349 |
| SK304 | 240V/1~ | SW 5937 | SP 3310 | SP 3029 | SP 3312 |
| | 208V/1~ | SW 5940 | SP3308 | SP 3029 | SP 3305 |
| | 208V/3~ | SW 5924 | SP3308 | SP 3080 | SP 3305 |
| | 480V/1~ | SW 5941 | SP 3321 | SP 3029 | SP 3329 |
| | 480V/3~ | SW 5923 | SP 3321 | SP 3080 | SP 3329 |
| | 600V/1~ | SW 5942 | SP 3341 | SP 3029 | SP 3349 |
| SK306 | 240V/1~ | SW 5938 | SP 3310 | SP 3100 | SP 3312 |
| | 208V/1~ | SW 5943 | SP3308 | SP 3220 | SP 3305 |
| | 208V/3~ | SW 5933 | SP3308 | SP 3080 | SP 3305 |
| | 480V/1~ | SW 5944 | SP 3321 | SP 3029 | SP 3329 |
| | 480V/3~ | SW 5934 | SP 3321 | SP 3080 | SP 3329 |
| | 600V/1~ | SW 5945 | SP 3341 | SP 3029 | SP 3349 |
| | 600V/3~ | SW 5935 | SP 3341 | SP 3080 | SP 3349 |
| SK310 | 208V/3~ | SW 5959 | SP 3308 | SP 3220 | SP 3305 |
| | 480V/3~ | SW 5958 | SP 3321 | SP 3080 | SP 3329 |
| | 600V/3~ | SW 5957 | SP 3341 | SP 3080 | SP 3349 |
| SK314 | 208V/3~ | SW 5946 | SP 3308 | SP 3027 | SP 3305 |
| | 480V/3~ | SW 5947 | SP 3321 | SP 3080 | SP 3329 |
| | 600V/3~ | SW 5948 | SP 3341 | SP 3080 | SP 3349 |
| SK320 | 208V/3~ | * | * | * | - |
| | 480V/3~ | SW 5950 | SP 3321 | SP 3100 | SP 3352 |
| | 600V/3~ | SW 5951 | SP 3341 | SP 3080 | SP 3353 |
| SK330 | 480V/3~ | SW 5952 | SP 3321 | SP 3027 | SP 3352 |
| | 600V/3~ | SW 5939 | SP 3341 | SP 3220 | SP 3353 |
| SK340 | 208V/3~ | * | * | * | - |
| | 480V/3~ | SW 5950 | SP 3321 | SP 3220 (2x) | - |
| | 600V/3~ | SW 5951 | SP 3341 | SP 3027 | - |
| SK360 | 480V/3~ | SW 5952 | SP 3321 | SP 3027 (2x) | - |
| | 600V/3~ | SW 5939 | SP 3341 | SP 3220 (2x) | - |

* Available, please consult factory.

Troubleshooting

Humidifier does not operate (Power Off)

| Indicator | Status | Display (blank) |
|-----------|--------|---|
| Power | OFF |  |
| Check | OFF | |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- The humidifier is not powered.
- The low voltage fuse is open.
- The high temperature switch is open.
- Wires harnesses inside the humidifier are not secured properly.

Corrective Action

- Check for the main power supply and fuses.
- Check the transformer and the low voltage fuse.
- Check the high temperature switch, the wires harnesses and the main PC board.

Humidifier does not operate (Power On)

| Indicator | Status | Display |
|-----------|--------|---|
| Power | ON |  |
| Check | OFF | |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- The rocker switch is at the OFF position.
- Wire harness from the LED display panel to the main PC board is not secured properly.

Corrective Action

- Press the rocker switch to the AUTO position.
- Check the white color wire harness.
- Press the RESET button on the main PC board.

Humidifier does not produce steam (No Demand)

| Indicator | Status | Display |
|-----------|--------|---|
| Check | OFF |  |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- Modulating humidifier: no analog signal.
- On/Off humidifier: no demand from humidistat or air flow is not detected by air pressure switch or high limit humidistat is open.
- Control wires are not properly secured to the terminal blocks.

Corrective Action

- Verify the setting of the humidistat.
- Check the fan operation.
- Check the operation of the high limit humidistat.
- Verify the connections of the wires to the control terminal blocks.

Humidifier does not produce steam (Safety Open) Modulating Humidifiers only

| Indicator | Status | Display |
|-----------|--------|--|
| Check | OFF |  |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- Air flow is not detected by air pressure switch or high limit humidistat is open.
- Control wires are not properly secured to the terminal blocks.

Corrective Action

- Check the fan operation.
- Check the operation of the high limit humidistat.
- Verify the wires to the control terminal blocks #1 & 2.

No water inside the evaporation chamber or Humidifier does not stop draining

| Indicator | Status | Display |
|-----------|--------|---|
| Power | ON |  |
| Check | ON | |
| Fill | ON | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- Humidifier is filling water but has not reached yet or does not reach the high limit of the water level sensor.
- Humidifier is not filling water.

Corrective Action

- Verify if the drain valve is open.
- Check if the shutoff valve on the water supply line is open.
- Verify the operation of the fill valve.
- Check that the fill valve strainer and the external strainer are not blocked.

Humidifier is always on Foam cycle

| Indicator | Status | Display |
|-----------|--------|--|
| Power | ON |  |
| Check | OFF | |
| Fill | ON | |
| Steam | OFF | |
| Drain | ON | |


Cause

- Excessive foaming condition inside the evaporation chamber.
- Foaming sensor is grounded.

Corrective Action

- Verify the quality of the supply water.
- Verify if chemical products were used to clean the evaporation chamber during maintenance. Rinse the chamber properly with water.
- Check the setting of the Drain cycle. Reduce the time between Drain cycles.

Humidifier is operating and the CHECK light is blinking

| Indicator | Status | Display |
|-----------|--------|---|
| Check | BLINK |  |
| Fill | OFF | |
| Steam | ON | |
| Drain | OFF | |


Cause

- The running hours have exceeded the Service hours.

Corrective Action

- Service the evaporation chamber, see Service section.
- Reset the Running hours to cancel the blinking of the CHECK light.

Humidifier is not operating and the CHECK light is ON

| Indicator | Status | Display |
|-----------|--------|---|
| Power | ON |  |
| Check | ON | |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- The electronic temperature sensor inside the water level sensor had sensed abnormal temperature.
- The quick connector to the water level sensor was removed while the humidifier was operating.
- The brown wire connected to the top left corner of the main PC board is not properly secured.

Corrective Action

- Verify if the humidifier was operating below the standard water level and then replace the water level sensor, item J.
- If connector was removed while power was still ON, press the TEST button on the main PC board until the Drain light is turned ON. Then press RESET once.
- Verify the connection of the brown wire to the main PC board.

Humidifier is not operating and the CHECK light is ON

| Indicator | Status | Display |
|-----------|--------|---|
| Power | ON |  |
| Check | ON | |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- The water level sensor is damaged.

Corrective Action

- Replace the water level sensor, item J.

Humidifier does not drain and the CHECK light is ON

| Indicator | Status | Display |
|-----------|--------|---|
| Power | ON |  |
| Check | ON | |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

- During a Drain or Foaming cycle, the water level sensor has sensed that the water level has not decreased.

Corrective Action

- Verify that the drain pump, the fill and drain water pipe connection, the water level sensor chamber are not obstructed.

Humidifier does not operate and display is blank

| Indicator | Status | Display (blank) |
|-----------|--------|---|
| Power | ON |  |
| Check | OFF | |
| Fill | OFF | |
| Steam | OFF | |
| Drain | OFF | |


Cause

The following components can be the cause of this problem: water level sensor (item J), main PC board (item U), modulating PC board (item V) or the LCD display (item N).

Corrective Action

Call factory for troubleshooting instructions.

Humidifier is producing steam and display is blank

| Indicator | Status | Display (blank) |
|-----------|--------|---|
| Power | ON |  |
| Check | OFF | |
| Fill | OFF | |
| Steam | ON | |
| Drain | OFF | |

Cause

- The potentiometer contrast is set at the lowest setting.
- The display ribbon cable is not connected properly.
- The LCD display is defective.

Corrective Action

- Adjust the contrast of the display.
- Verify that the connections of the ribbon cable are properly secured and are on the right side (red line on cable).
- Replace the LCD display, item N.

Notes



neptronic[®]

400 Lebeau blvd, Montreal, Qc, H4N 1R6, Canada

www.neptronic.com

Toll free in North America: 1-800-361-2308

Tel.: (514) 333-1433

Fax: (514) 333-3163

Customer service fax: (514) 333-1091

Monday to Friday: 8:00am to 5:00pm (Eastern time)