

Specification and Installation Instructions

Controller Models

EVCB14NIT4X

(4 TRIACS / independent / external motor)

EVCB14NDT4X

(4 TRIACS / dependent / external motor)
For use with external floating or modulating actuators

TRL Series Digital Room Sensor

TRL24 (With temperature sensor)

TRLH24 (With temperature and humidity sensor)
TRLG24 (With temperature and CO₂ sensor)
TRLGH24 (With temperature, CO₂ and humidity

sensors)

TDU Series Digital Room Sensor

TDU00 (Vertical Grey LCD, white enclosure)
TDU30 (Vertical Black LCD, black enclosure)
TDU60 (Vertical Black LCD, white enclosure)

TDU10 (Horizontal Grey LCD, white enclosure)
TDU40 (Horizontal Black LCD, black enclosure)
TDU70 (Horizontal Black LCD, white enclosure)



EVCB Series







TRL24 Series

TDU00 / TDU30 / TDU60 Series

TDU10 / TDU40 / TDU70 Series

Description

The EVCB Series is a combination controller and digital room sensor with support for networked communications via the BACnet MS/TP or Modbus protocol. The EVCB Series controller is compatible with both TRL24 and TDU series digital room sensors. The Networkable VAV Controller is designed for simple and accurate control of any variable air volume box in a number of zone control configurations. Its field configurable algorithms enable versatile implementation of required control sequences.

Features

- Field configured VAV algorithms, inputs and outputs
- Control external actuators using analog (0-10Vdc, adjustable) or floating signals with feedback
- On-board differential pressure sensor
- Select direction on analog outputs
- Simple air balancing and commissioning via digital room
 sensor
- Configurable PI (Proportional-Integral) function
- Independent, configurable proportional control band and dead band per ramp
- Activate output with CO₂ sensor from TRL/TDU or external input
- Selectable internal or external temperature sensor (10ΚΩ)
- Changeover by contact or external temperature sensor
- Internal and external temperature sensor calibration
- Freeze protection
- Removable, raising clamp, non-strip terminals

Operational Features

- Backlit LCD with simple icon and text driven menus
- · Select digital room sensor's default display
- Network service port via on-board mini USB connector
- Manual night setback or no occupancy override
- · Multi level lockable access menu and setpoint
- Selectable Fahrenheit or Celsius scale
- 3-wire connection to controller and 4 push keys

Network Communication

- BACnet MS/TP or Modbus communication port
- Select MAC address via DIP switch or via network
- Automatic baud rate detection

BACnet MS/TP®

- Automatic device instance configuration
- Copy & broadcast configuration via digital room sensor menu or via BACnet to other controllers
- BACnet scheduler
- Firmware upgradeable via BACnet
- Support COV (change of value)

Modbus

- Modbus @ 9600, 19200, 38400 or 57600 bps
- RTU Slave, 8 bits (configurable parity and stop bits)
- · Connects to any Modbus master



Specification and Installation Instructions

Controller Specifications

Description	EVCB14NIT4X and EVCB14NDT4X				
Power consumption	10 VA max				
Power supply	22 to 26 Vac 50/60 Hz				
Lanceta	2 Universal inputs (Thermistor 10KΩ Type 3, digital 24Vac/dry contact, or 0-10Vdc)				
Inputs	2 digital inputs				
	2 analog outputs (0-10 Vdc or 2-10Vdc; selectable)				
Outputs	4 TRIAC outputs 24 Vac, 500mA max thermal fuse in series with each TRIAC output (on/off, pulse, or 2 floating outputs)				
Real Time Clock	Real-time clock (RTC) with super capacitor backup (approximately 3 days)				
BACnet	BACnet® MS/TP @ 9600, 19200, 38400 or 76800 bps (BAS-C)				
Modbus	Modbus RTU slave @ 9600, 19200, 38400 or 57600. Selectable parity and stop bit configuration: No parity, 2 stop bit Even parity, 1 stop bit Odd parity, 1 stop bit				
Communication connection	24 AWG twisted-shield cable (Belden 9841 or equivalent). Max 0ft (15m) between controller and digital rosensor				
Electrical connection	0.8 mm ² [18 AWG] minimum				
Operating temperature	0°C to 50°C [32°F to 122°F]				
Storage temperature	-30°C to 50°C [-22°F to 122°F]				
Relative Humidity	5 to 95% non condensing				
Weight	1.8 kg. [4 lb]				
Dimensions A = 7.20" 183mm B = 1.23" 31mm C = 2.93" 74mm D = 4.02" 102mm E = 1.78" 45mm	D C				
	A B				



Specification and Installation Instructions


Digital Room Sensor Specifications

Description	TRL24 and TDU Series						
Temperature Sensor (TRL24 a	and TDU)						
Setpoint range	10°C to 40°C [50°F to 104°F]						
Control accuracy	Temperature: ±0.4°C [0.8°F]						
Display resolution	±0.1°C [0.2°F]						
Humidity Sensor (TRLH24, TRLGH24 and TDU models with Humidity Sensors)							
Sensor range	5 to 95%RH						
Display resolution	0.1%						
CO ₂ Sensor (TRLG24, TRLGH	I24 and TDU models with CO₂ Sensors)						
Operating principle	Self-calibrating, Non-Dispersive Infrared (NDIR)						
Sensor Range	0 to 2000 ppm						
Setpoint range	100 to 2000 ppm						
Accuracy	±30 ppm ±3% of reading						
Response time	2 minutes by 90%						
Display resolution	1 ppm						
PIR Motion Sensor (TDU00 / T	TDU30 / TDU60 models with PIR Sensor)						
Operating Principle	Passive Infrared (PIR)						
Detection Angle	100°						
Detection Distance	4m [13ft]						
Detection Area	4m (13ft) 100°						
VOC Sensor (TDU00 / TDU30 / TDU60 models with VOC Sensor)							
Operating Principle	Self-calibrating, Non-Dispersive Infrared (NDIR)						
Sensor Range	0-1000 ppb isobutylene equivalent tVOCs						
Response Time	<5 seconds for tVOC						
Start up Time	15 minutes						
Other							
Electrical connection	3 wires to VAV controller and 2 wires to BACnet/Modbus network 0.8 mm² [18 AWG] minimum						
Network service port	Mini USB connector						
Power supply	24Vac						
Power consumption	1VA						
Operating temperature	0°C to 50°C [32°F to 122°F]						
Storage temperature	-30°C to 50°C [-22°F to 122°F]						
Relative humidity	5 to 95 % non condensing						
Enclosure protection	IP 30 (EN 60529)						
Weight	120 g. [0.25 lb]						



Specification and Installation Instructions

Dimensions

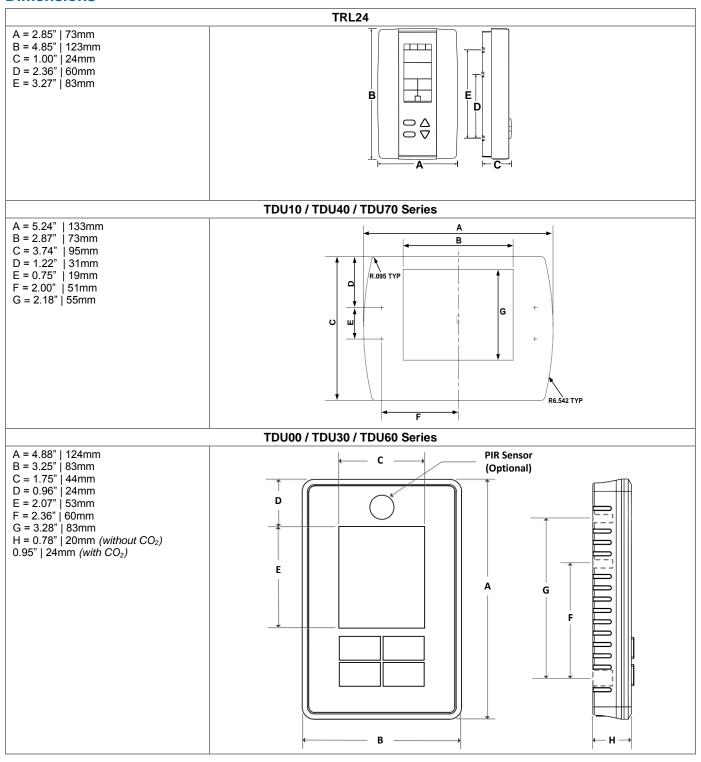



Specification and Installation Instructions

TDU Models

Horizontal Model#	Temp	RH	CO ₂
TDU10-100 TDU40-100 TDU70-100	•		
TDU10-101 TDU40-101 TDU70-101	•	•	
TDU10-102 TDU40-102 TDU70-102	•	•	•
TDU10-103 TDU40-103 TDU70-103	•		•







TDU10 Series

TDU40 Series

TDU70 Series

Vertical Model #	Temp	RH	CO ₂	PIR	voc
TDU00-100 TDU30-100 TDU60-100	•				
TDU00-101 TDU30-101 TDU60-101	•	•			
TDU00-102 TDU30-102 TDU60-102	•	•	•		
TDU00-104 TDU30-104 TDU60-104	•			•	
TDU00-105 TDU30-105 TDU60-105	•	•		•	
TDU00-106 TDU30-106 TDU60-106	•	•	•		•
TDU00-107 TDU30-107 TDU60-107	•	•	•	•	•







TDU00 Series

TDU30 Series

TDU60 Series




Specification and Installation Instructions

TRL24




Cooling ON A: Automatic		Communication Status	Δ	Alarm status
Heating ON A: Automatic	6	Menu Locked)	Energy saving mode (NSB or Occupancy)
Fan ON A: Automatic	4	Programming mode (Technician setting)	%RH	Percentage of humidity
			°C _{or} °F	°C: Celsius scale °F: Fahrenheit scale

TDU10 / TDU40 / TDU70 Series

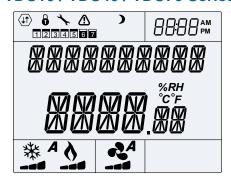

$\langle \downarrow \uparrow \rangle$	Network Communication	6	User Lock	*	Programming Mode (Technician Setting)
Δ	Alarm Status)	Energy Saving Mode (NSB/OCC)	1234567	Schedule
8888£	Time	ррт	Parts Per Million	℃ °F %RH	°C: Celsius Scale °F: Fahrenheit Scale %RH: Humidity
А	Automatic Mode	*	Cooling	0	Heating
				2	Fan

TDU00 / TDU30 / TDU60 Series

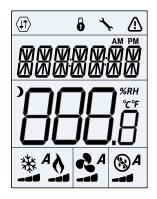

<u>(11)</u>	Network Communication	6	User Lock	4	Programming Mode (Technician Setting)
A	Alarm Status)	Energy Saving Mode (NSB/OCC)	AM PM	Time
°C °F %RH	°C: Celsius Scale °F: Fahrenheit Scale %RH: Humidity	А	Automatic Mode	*	Cooling
9	Heating	R	Fan		



Specification and Installation Instructions


Mounting Instructions

TRL24



CAUTION: Remove power to avoid a risk of malfunction.

- A. Remove the captive screw that's holding the base and the front cover of the unit together.
- B. Lift the front cover of the unit to separate it from the base.
- C. Pull all wires through the holes in the base.
- D. Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- E. Mount the control module on the base and secure using the screw.

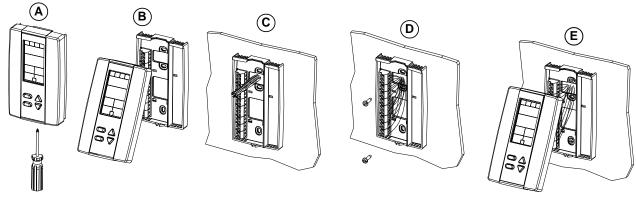


TDU10 / TDU40 / TDU70 Series



CAUTION: Remove power to avoid a risk of malfunction.

- A. Remove the wall mounting plate (highlighted) from the back of the digital room sensor.
- B. Install the mounting plate on the gang box.
- C. Pull the wires through the base hole and make the appropriate connections.
- D. Mount the digital room sensor onto the wall plate. To mount it, place the top of the digital room sensor on the mounting plate first and push it into the grooves to snap it into place.
- E. Secure the digital room sensor using the screw (supplied).

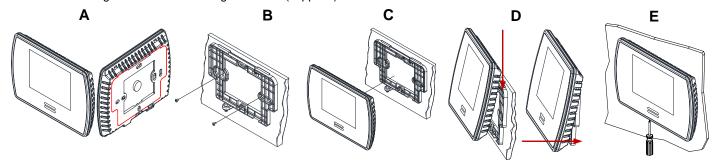


TDU00 / TDU30 / TDU60 Series



CAUTION: Remove power to avoid a risk of malfunction.

- A. Remove the captive screw that's holding the base and the front cover of the unit together.
- B. Lift the front cover of the unit to separate it from the base.
- Pull all wires through the holes in the base.
- D. Secure the base to the wall using wall anchors and screws (supplied). Make the appropriate connections.
- E. Mount the control module on the base and secure using the screw.

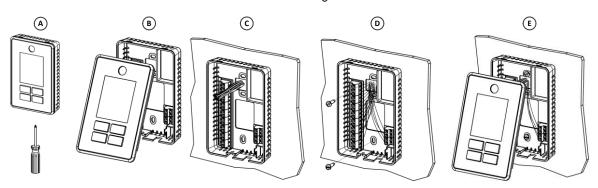



Specification and Installation Instructions


Mechanical Installation- Actuator

- Manually close the damper blades and position the actuator to 0° or 90°.
- 2. Slide the actuator onto the shaft.
- 3. Tighten the nuts on the "U" bolt to the shaft with an 8mm wrench to a torque of 150 in.lb. [17 Nm].
- Slide the mounting bracket under the actuator. Ensure free movement of the slot at the base of the actuator. Place the bracket pin at mid distance of the slot.
- Affix the bracket to the ductwork with #8 self-tapping screws.
- Connect the cable from the EVC to the terminal in the actuator as shown.




Do not press the clutch when the actuator is powered.

Terminals on the Actuator




External 180 in. lb. Actuator

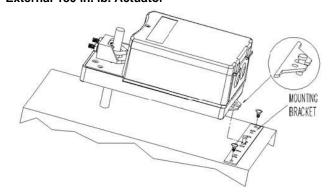

Signal cable from EVC controller

Use to connect the external motor on EVCB14NIT4X and EVCB14NDT4X.

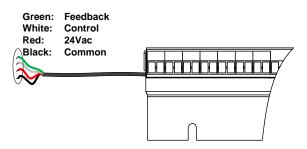

BACnet or Modbus Address DIP Switch (DS1)

MAC address for communication, are selectable by DIP switch using binary logic. If you do not change device instance in program mode, it will be automatically modified according to the MAC address.



Note: Avoid using addresses above 246 when selecting Modbus MAC address.

MAC Address	DS.1 = 1	DS.2 = 2	DS.3 = 4	DS.4 = 8	DS.5 = 16	DS.6 = 32	DS.7 = 64	DS.8 = 128	Default Device Instance
0	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	153000
1	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	153001
2	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	153002
3	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF	153003
4	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF	153004
126	OFF	ON	ON	ON	ON	ON	ON	OFF	153126
127	ON	ON	ON	ON	ON	ON	ON	OFF	153127


^{*} Slave addresses available by setting DS.8 to ON



Specification and Installation Instructions

Wiring

We strongly recommend that all Neptronic products be wired to a separate grounded transformer and that transformer shall service only Neptronic products. This precaution will prevent interference with, and/or possible damage to incompatible equipment.

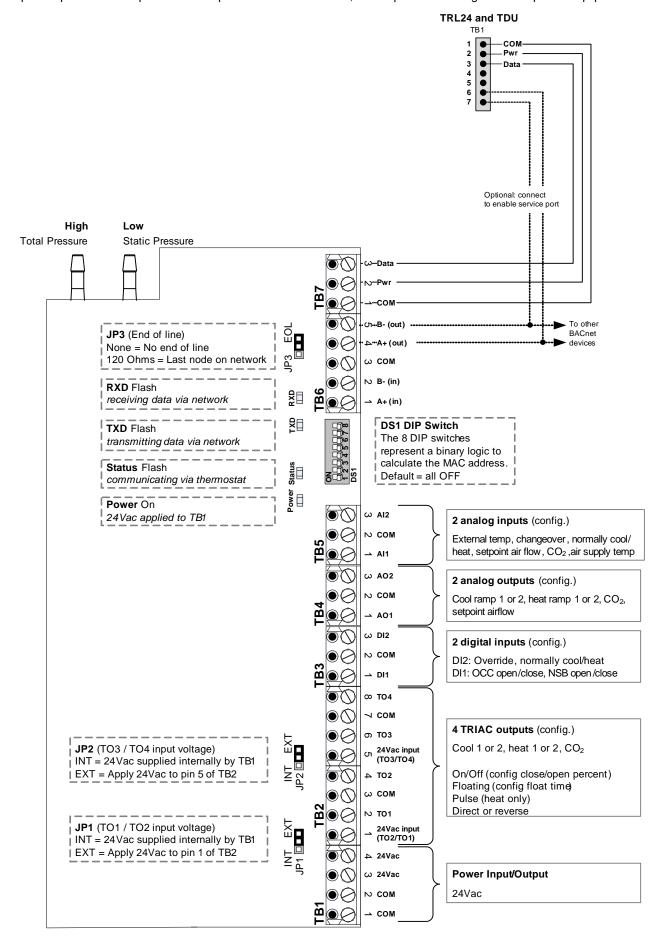




Specification and Installation Instructions

PCB Drawings

TRL24 Digital Room Sensor

3 wire cable (TB1 #1, 2 & 3)

Connect TB1 #6 (A+) & #7 (B-) to EVCB to enable the BACnet service port.

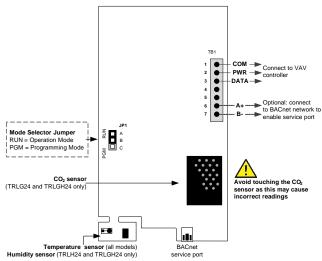


Mode Selection (JP1)

JP1 RUN	RUN: Digital room sensor is in Operation Mode. Digital room sensor must be set in this mode for normal system operation. If not locked, setpoint and control mode can be changed by the end user.
JP1 RUN PGM	PGM: Digital room sensor is set in Programming Mode. Refer to the following sections for more details.

TDU10 / TDU40 / TDU70 Series

3 wire cable (TB1 #1, 2 & 3)

Connect TB1 #6 (A+) & #7 (B-) to EVCB to enable the BACnet service port.

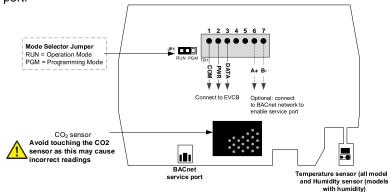


Mode Selection (JP1)

Wiode O	Hode Gelection (or 1)								
JP1 RUN	RUN: Digital room sensor is in <u>Operation Mode</u> . Digital room sensor must be set in this mode for normal system operation. If not locked, setpoint and control mode can be changed by the end user.								
JP1 RUN PGM	PGM: Digital room sensor is set in Programming Mode. Refer to the following sections for more details.								

TDU00 / TDU30 / TDU60 Series

3 wire cable (TB1 #1, 2 & 3)

Connect TB1 #6 (A+) & #7 (B-) to EVCB to enable the BACnet service port.

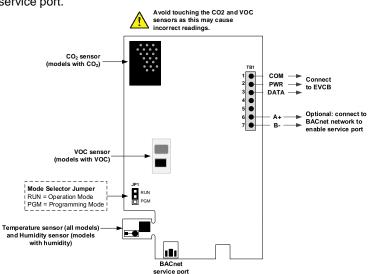

Mode Selection (JP1)

JP1 ■ RUN □ PGM	RUN: Digital room sensor is in Operation Mode. Digital room sensor must be set in this mode for normal system operation. If not locked, setpoint and control mode can be changed by the end user.						
JP1 RUN PGM	PGM: Digital room sensor is set in Programming Mode. Refer to the following sections for more details.						



Specification and Installation Instructions

Access to Menus

The menu overviews and options are the same for both TRL24 and TDU digital room sensors. However, the action key or the key used to access the menus and save changes is different in the digital room sensors. Use the following menu overviews with the appropriate action key as per your digital room sensor.

Action Keys on Digital Room Sensor


Action Key		Task	
TRL24	TDU	lask	
*	D	Press to access the programming menus and save any changes.	
4		Press to return to the previous step without saving.	



Specification and Installation Instructions

Pressure & Applications – Menu (1 of 8) | Pressure and Applications

For a description of the default settings for each application refer to Annex A: Control Apps on page 24.

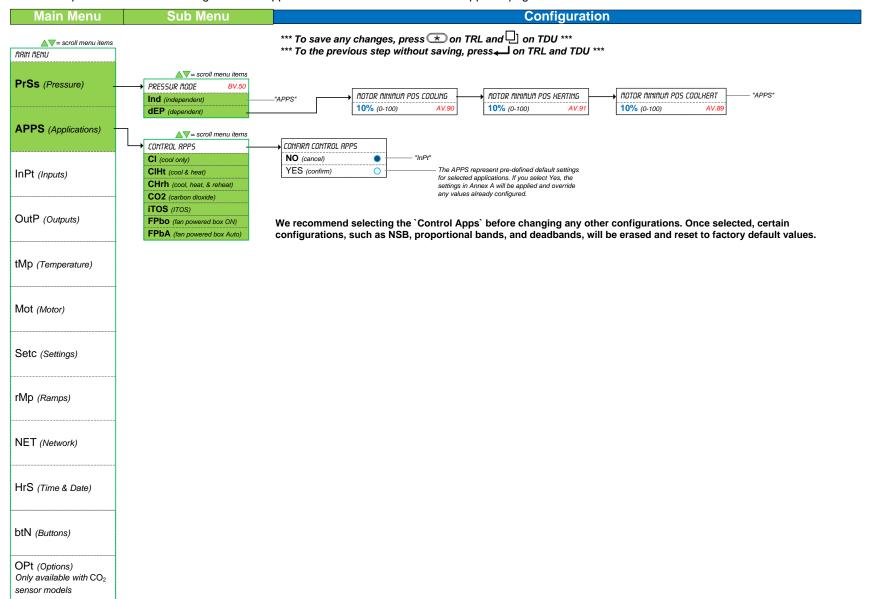



sensor models

Networkable VAV Controller

Specification and Installation Instructions


Inputs - Menu (2 of 8) | Al1, Al2, Dl1 and Dl2

Sub Menu Configuration *** To save any changes, press 🖈 on TRL and 🗓 on TDU *** *** To the previous step without saving, press on TRL and TDU *** ▲V= scroll menu items MSV. 1 (AI1) All SIGNAL TYPE MAIN MENU OFF (disabled) Go to "AI2" ▲▼= scroll menu items EtS (external temp sensor) PrSs (Pressure) CONFIG INPUT SENs (sensor) CHOVER SETPNT Go to "AI2" Appears only if using digital room NoCl (normally cool) 24°C sensors with temperature and humidity 0 AV.58 AI2 0 Go to "AI2" NoHt (normally heat) For TRLG, TRLGH and TDU digital room DI1 sensors with CO2, go to "Opt" menu StFI (setpnt airflow 0-10 Vdc)* APPS (Applications) DI2 CO2 (carbon dioxide) CO2 MAXIMUM RANGE CO2 SETPNT COS DISPLAY -Go to "AI2" ASt (Air supply temp sensor) 2000 ppm AV.140 800 ppm AV.141 NO • * = StFl not available on YES MOT (Motor position) Go to "AI2" To display CO2 without generating 0 pressure dependent model an alam, use a setpoint higher than EVCB14NDT4X InPt (Inputs) ▲▼= select / set value 2000ppm or the CO2 Maximum When set to YES, the unit will not display (AI2 Range (highest of the 2). AI2 SIGNAL TYPE OFF (disabled) Go to "DI1" EtS (external temp sensor) OutP (Outputs) SENs (sensor) CHOVER SETPNT Go to "DI1" Appears only if using digital room sensors with temperature and humidity NoCl (nomally cool) 0 24°C AV.58 0 NoHt (normally heat) Go to "DI1" For TRLG, TRLGH and TDU digital room sensors with CO2, go to "Opt" menu. tMp (Temperature) StFI (setpnt airflow 0-10Vdc)* CO2 MAXIMI IM RANGE CO2 DISPLAY BV.65 CO2 (carbon dioxide) CO2 SETPNT ·Go to "DI1" NO ASt (Air supply temp sensor) 2000 ppm AV.140 800 ppm mor (Motor position) To display CO2 without generating YES Go to "DI1" 0 Mot (Motor) an alarm, use a setpoint higher than 2000ppm or the CO₂ Maximum ▲▼= select/set value When set to YES, the unit will not display Range (highest of the 2). the time when in Operation Mode MSV. 10 (DI1 NSB-OCC CONTRCT OFF Go to "DI2" Setc (Settings) OCCo (occupancy open) OCC MINIMUM TIME IN MIN NO OCC OVERIDE DELRY MIN NO OCC HERTING SETPNT NO OCC COOLING SETPNT -Go to "DI2" OCCc (occupancy closed) 30 min (0-240) 120 min (0-180) AV.61 16°C / 61°F 28°C / 82°F nSbo (night set back open) NS 8 OVERIDE DELAY MIN NSB MODE BV.20 nSbc (night set back closed) 120 min (0-180) rMp (Ramps) StP (setpoint) Off 0 NET (Network) NS 8 COOLING SETPNT MSV.36 ▲▼= select / set value NS 8 HERTING SETPNT NSB MOTOR MODE -Go to "OutP" MSV. 14(DI2) DI2 SIGNAL TYPE 16°C / 61°F AV.19 28°C / 82°F AV.18 Auto Go to "OutP" **OPEn** 0 OFF Ovrd (override all) DI2 CONTRCT BV.36 DIZ DELAY SECONDS Go to "OutP" HrS (Time & Date) OVH1 (override heat 1) 0 NO (normally open) 120 (0-3600) AV.64 OVH2 (override heat 2) 0 NC (normally closed) OVHt (override all heat) btN (Buttons) NoCl (normally cool) -Go to "OutP NoHt (normally heat) OPt (Options) Only available with CO2



Specification and Installation Instructions


TRIAC Outputs - Menu (3 of 8) | TO1 and TO2

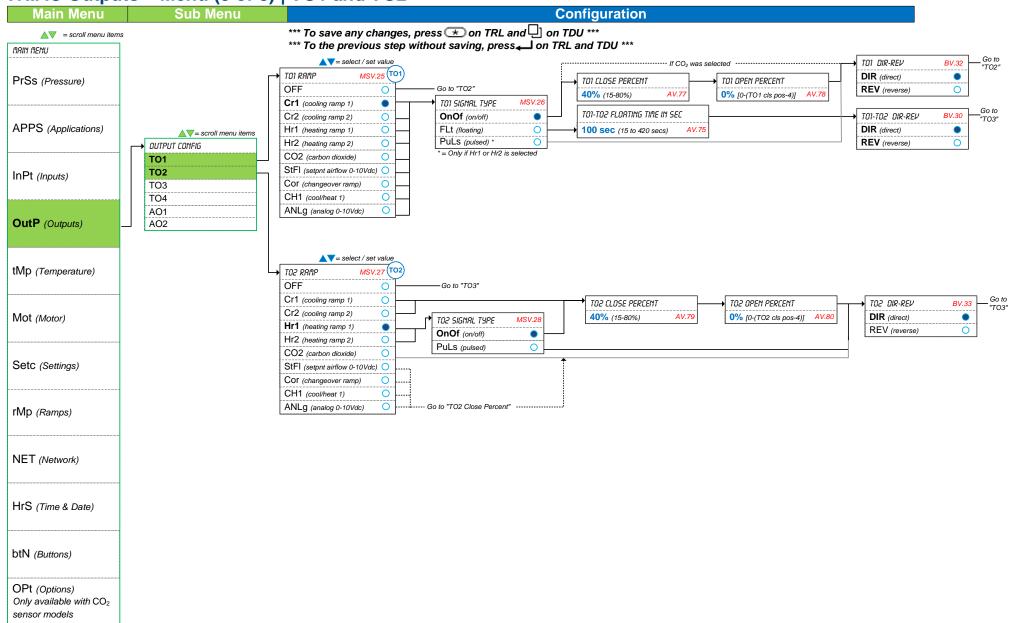



Specification and Installation Instructions

TRIAC Outputs - Menu (4 of 8) | TO3 and TO4

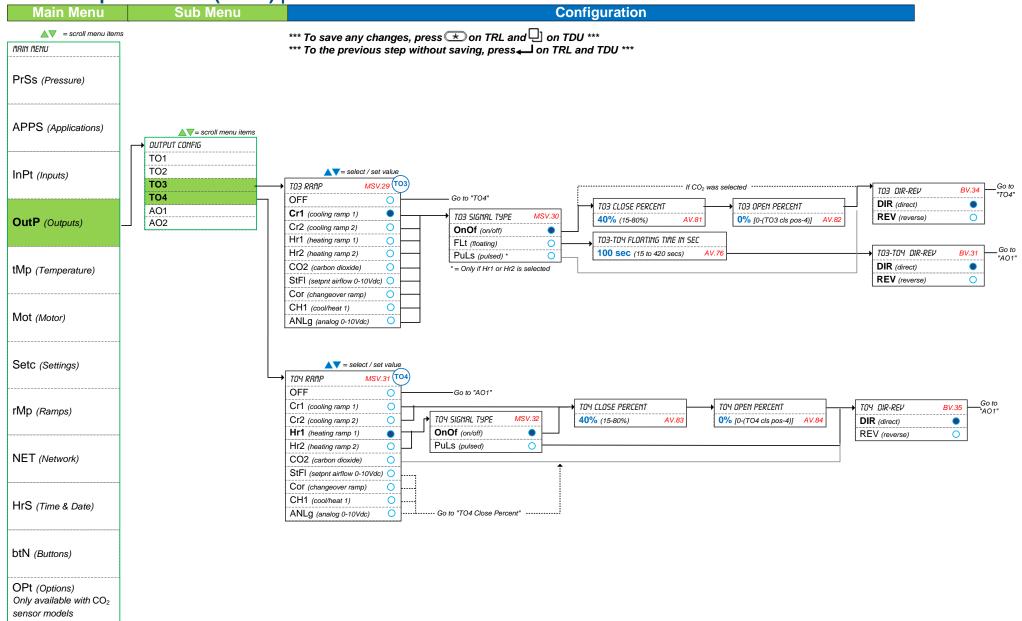



Specification and Installation Instructions


Analog Outputs - Menu (5 of 8) | AO1 and AO2

Sub Menu Main Menu Configuration *** To save any changes, press 🛨 on TRL and 🗓 on TDU *** *** To the previous step without saving, press on TRL and TDU *** ▲▼= scroll menu items ▲▼= select / set value MAIN MENU AO1 RAMP OFF 0 PrSs (Pressure) Cr1 (cooling ramp 1) RO1 MINIMUM VOLTAGE RO1 MRXIMUM VOLTRGE RO1 DIR-REV BV.25 -Go to "AO2" Cr2 (cooling ramp 2) 0. DIR (direct) 0.0 Vdc 10.0 Vdc • AV.70 AV.71 Hr1 (heating ramp 1) 0 REV (reverse) 0 Hr2 (heating ramp 2) APPS (Applications) ▲▼= scroll menu items ArFL (airflow reading) OUTPUT CONFIG CO2 (carbon dioxide) TO1 StFI (stpnt airflow 0-10Vdc)* TO2 InPt (Inputs) TO3 TO4 A01 ▲▼= select / set value MSV.22 (AO2) AO2 RAMP AO2 OutP (Outputs) OFF 0 * = StFl not available on Cr1 (cooling ramp 1) 0 -ROZ MINIMUM VOLTRGE pressure dependent model ROZ MRXIMUM VOLTRGE ROZ DIR-REV BV.26 -Go to "tmp" EVCB14NDT4X Cr2 (cooling ramp 2) 0 -0.0 Vdc 10.0 Vdc DIR (direct) • AV.73 Hr1 (heating ramp 1) tMp (Temperature) REV (reverse) 0 Hr2 (heating ramp 2) ArFL (airflow reading) CO2 (carbon dioxide) Mot (Motor) StFI (stpnt airflow 0-10Vdc)* Setc (Settings) rMp (Ramps) NET (Network) HrS (Time & Date) btN (Buttons) OPt (Options) Only available with CO₂ sensor models



Specification and Installation Instructions


Settings - Menu (6 of 8) | Temp, Motor, and Settings

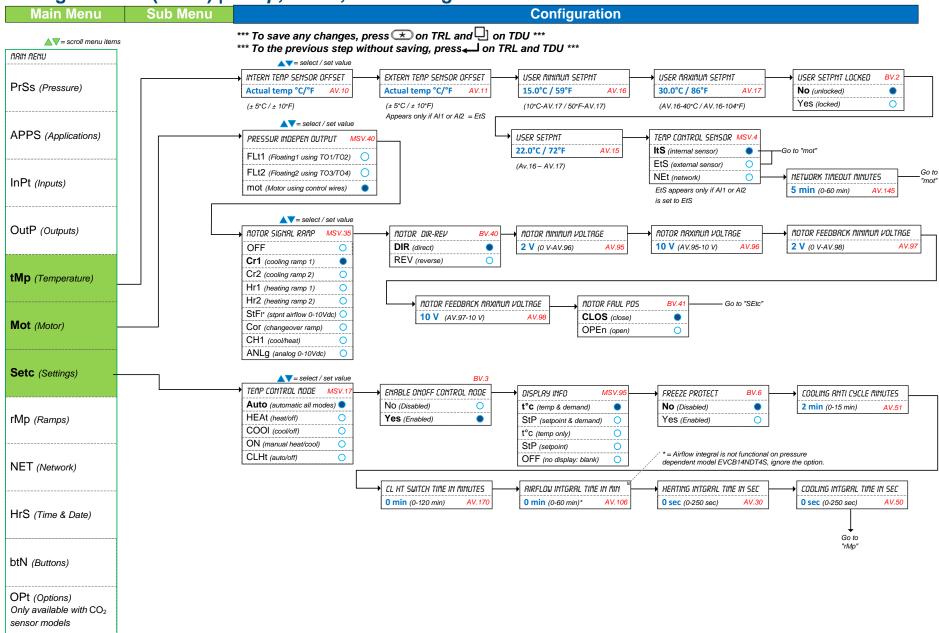



Specification and Installation Instructions

Settings - Menu (7 of 8) | Ramps, Network and Time

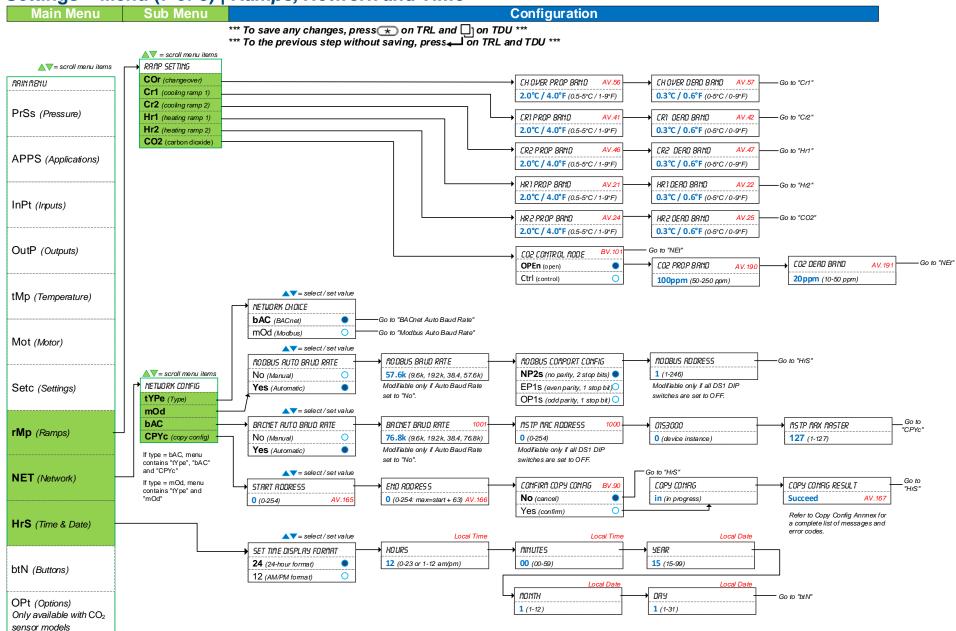



Specification and Installation Instructions

Settings - Menu (8 of 8) | Buttons and Options

Main Menu Sub Menu Configuration

*** To save any changes, press \star on TRL and 🔲 on TDU ***

*** To the previous step without saving, press on TRL and TDU ***

▲▼= scroll menu items MRIN MENU PrSs (Pressure) ▲▼= select/set value BOTTOM LEFT KEY LOCKED UPPER LEFT KEY LOCKED ARROWS KEY LOCKED go to "OPt" APPS (Applications) NO NO • NO YES YES 0 YES 0 0 InPt (Inputs) Appears only if using TRLG or TRLGH or Appears only if using TRLG or TRLGH or TDU digital room sensors with CO2. TDU digital room sensors with CO2. OutP (Outputs) For digital room sensors with temperature Appears only if using digital room Appears only if using digital room For digital room sensors with temperature and humidity, go to "InPt" menu. sensors with CO2. sensors with Humidity. and humidity, go to "InPt" menu. CO2 DISPLAY CO2 CONTROL SOURCE BV.66 BV.65 CO2 SETPNT DISPLAY HUMIDTY BV.60 -Go to "PrSs" YES 0 800 ppm 0 YES 0 tMp (Temperature) NO NO • To display CO2 without generating an ANLg • • alarm, use a setpoint higher than When set to YES, the unit will not display 2000ppm or the CO₂ Maximum Range the time when in Operation Mode (highest of the 2). Mot (Motor) Setc (Settings) rMp (Ramps) **NET** (Network) HrS (Time & Date) btN (Buttons) **OPt** (Options) Only available with CO2 sensor models



Specification and Installation Instructions

Operation Menus

This menu is accessible through normal operation mode. The Mode Selector jumper (JP1) of the digital room sensor must be set to the "RUN" position (Operation Mode). Refer to Wiring on page 9.

Note: Since the action keys are different on TRL and TDU digital room sensor series, both keys have been included in the instructions. Refer to the Action Keys on Digital Room Sensor section to know and use the key as available on your digital room sensor.

- 1. Press the [🖈 / 🗓] and 🛹 keys simultaneously for 5 seconds. The "ENTER PRSSWORD" screen appears.
- 2. Enter the password within 1 minute by using the arrow keys to increase or decrease the value and the [* / *] and * keys to toggle between the digits.
 - a. Password 372 = Temperature Offset Menu
 - b. Password 637 = Network Settings Menu
 - c. Password 757 = Airflow Balance Mode
- 3. If you enter the wrong password, the digital room sensor displays "**Eror**" and returns to Operation Mode. The digital room sensor will return to normal mode if you navigate through the entire menu and do not make any selection, or if you do not press any key for 5 minutes. The changed values will be saved automatically.

Menu 372 - Temperature Offset

1. "INTERN TEMP SENSOR OFFSET"

Range: 10 to 40°C [50 to 104°F]

Offset: Max ± 5°C

Increment: 0.1°C [0.2°F]

Compare the displayed temperature reading with a known value from a digital room sensor. To offset or calibrate the sensor, use the arrows key to set the desired temperature reading. This is useful for digital room sensors installed in areas where the temperature read is slightly different than the room's actual temperature. For example, a digital room sensor placed right under the air diffuser.

If the digital room sensor is set to use an external temperature sensor (EtS), the digital room sensor displays "OFF".

2. "EXTERN TEMPER SENSOR OFFSET"

Range: 0 to 50°C [41

[41 to 122°F]

Offset: Max ± 5°C

Increment: 0.1°C [0.2°F]

This option appears if you've set one of the analog inputs to **EtS** (External temperature sensor). When the digital room sensor is connected to the appropriate analog input, the display shows the temperature read by the external temperature sensor. Adjust the offset by comparing it with a known value (e.g. thermometer). If the sensor is not connected or short circuited, then the unit displays the sensor's limit.

3. "INPUT3 READING"



Range: 250mV (0") to 4000mV (1")

Displays the voltage output value in mV of the pressure sensor. Does not appear for EVCB14NDT4X (pressure dependent) model.

ч. "INPUT3 MINIMUM READING




Range: 10mV to 180mV

Default: 60mV

This setting represents the deadband of the pressure sensor in mV. For advanced users or special applications only. We recommend that you use the default setting of 60mV. Does not appear for EVCB14NDT4X (pressure dependent) model.

Menu 637 – Network Settings

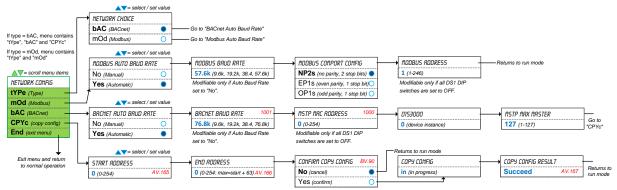

^{***} To save any changes, press 🛨 on TRL and 🗓 on TDU ***


^{***} To the previous step without saving, press on TRL and TDU ***



Specification and Installation Instructions


Menu 757 - Airflow Balance Mode

Pressure independent model: EVCB14NIT4X

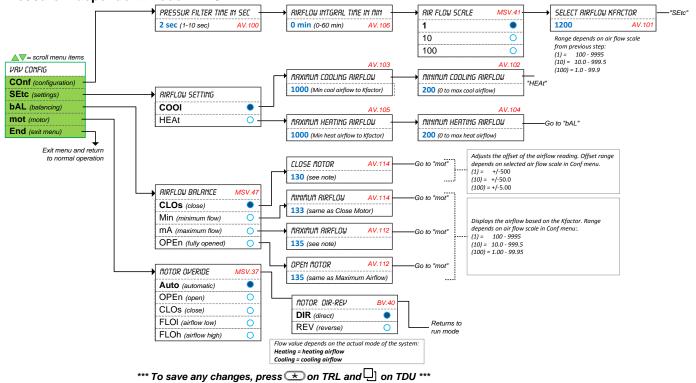

Note: Refer to EVCB-Airflow Balance Instructions on Neptronic website for further information on airflow balancing function.

Pressure dependent model: EVCB14NDT4X



*** To the previous step without saving, press on TRL and TDU ***

- *** To save any changes, press 🛨 on TRL and 🗓 on TDU ***
- *** To the previous step without saving, press on TRL and TDU ***

Reset to Factory Default Settings



This will erase all actual configurations and replace them with the factory default settings.

- 1. The Mode Selector jumper (JP1) of the digital room sensor must be set to the "RUN" position (Operation Mode). Refer to Wiring on page 9.
- 2. During the power up sequence of the controller and digital room sensor (when the firmware versions are displayed), press and hold both the ◀ and ▼keys.
- 3. The "ENTER PRSSWORD" screen appears. Enter 372 within 1 minute by using the arrow keys to increase or decrease the value and the [🖈 / 🗓] and 🖊 keys to toggle between the digits.
- 4. Use the arrow keys to select YES and then press [* / 🗓]




Specification and Installation Instructions


Operation Mode

The Mode Selector Jumper (JP1) of the digital room sensor must be set to the "RUN" position (Operation Mode). Refer to Wiring on page 9.


TRL24

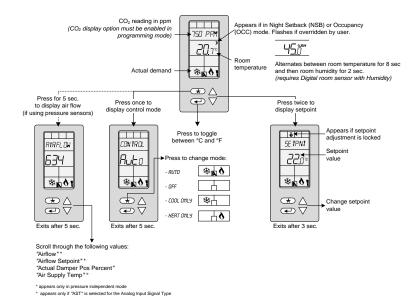

TDU10 / TDU40 / TDU70 Series

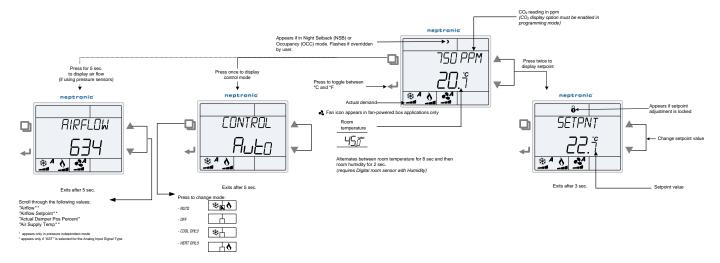

TDU00 / TDU30 / TDU60 Series

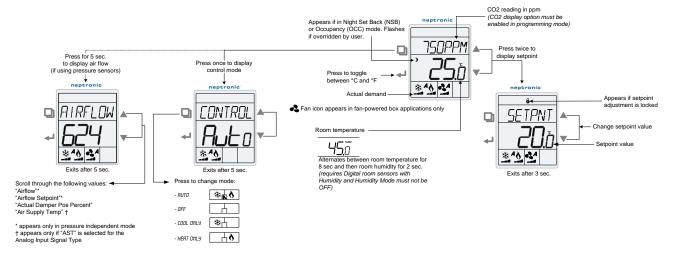

neptronic

Networkable VAV Controller

Specification and Installation Instructions

Power Up

Upon power up, the LCD illuminates and all segments appear for 2 seconds. The digital room sensor then displays its current version of the digital room sensor for 2 seconds followed by the current version of the controller for 2 seconds. Pressing any key on the digital room sensor illuminates the LCD for 4 seconds.

CO₂ (Digital Room Sensors with CO₂)

If enabled via the configuration menu, the digital room sensor displays the CO_2 reading on the first line above the temperature reading. If CO_2 display is enabled, the time will not be displayed.

Temperature Display and Setpoint

If enabled in the "Display Info" menu (see Settings – Menu (6 of 8) | Temp, Motor, and Settings on page 17), the digital room sensor displays the temperature reading. If the sensor is disconnected or short circuited, then the unit displays the sensor's limit. To toggle the temperature scale between °C and °F, press the key. To display the setpoint, press the or key twice. The setpoint appears for 5 seconds. To adjust the setpoint, press the arrow keys while the temperature is displayed. If the setpoint adjustment has been locked "SETPNT LOCKED", the lock symbol appears.

Humidity

If enabled in the "Options" menu (see Settings – Menu (7 of 8) | Ramps, Network and **Time** on page 18), the digital room sensor displays the temperature reading for 8 seconds and then displays the humidity reading for 2 seconds. If the sensor is disconnected or short circuited, then the unit displays the sensor's limit.

Airflow and Air Supply Temperature

Press and hold the [** / *!] key for 5 seconds and use the arrow keys to view the "RIRFLOW", "RIRFLOW SETPNT", "RCTURL DRMPER POS PERCENT" and "RIR SUPPLY TEMP". After 5 seconds without any action, the digital room sensor returns to operation mode. The air supply temperature appears only if analog input Al1 or Al2 are configured with the AST option. Not available on the following pressure dependent model EVCB14NDT4X.

Control Mode

To access the Control Mode, press the [*/ -] key. The Control Mode appears for 5 seconds. Press the [*/ -] key to scroll through the following control modes. These options can vary depending on the options selected in "Temp Control Mode" and "Enable OnOff Control Mode".


- Auto (Automatic Cooling or Heating)
- OFF (if it is not disabled in Programming Mode)
- Cooling only (on, with cooling symbol)
- Heating only (on, with heating symbol)

Night Setback (NSB) or Occupancy Mode

This function is only available if you set DI1 to **nSb** (Night setback contact) or **Occ** (occupancy mode). If the DI1 contact is triggered, the digital room sensor enters NSB or No Occupancy Mode (the) symbol appears) and uses the NSB or OCC heating and cooling setpoints.

Set Time and Date

- 1. Ensure that JP1 on the digital room sensor is set to Run.
- Press and hold the \(\psi\) key for 5 seconds
- 3. Use the arrow keys to set the desired value. Press the [* / *] key to save and got to the next step. Press the * key to go to the previous step without saving.



^{***} To save any changes, press 🛨 on TRL and 🗓 on TDU ***



Specification and Installation Instructions

Annex A: Control Apps

Refer to *Pressure & Applications – Menu (1 of 8)* on page 12 for more information. The available **Control Apps** vary according to the model

Description	CL (cool only)	CLHt (cool/heat)	CHrH (cool/heat/reheat)	CO ₂ (CO ₂)	ITOS (ITOS)	FPbo (fan powered ON)	FPbA (fan powered Auto)
Min. Setpoint	20°C (68°F)	20°C (68°F)	20°C (68°F)	20°C (68°F)	15°C (59°F)	15°C (59°F)	15°C (59°F)
Max. Setpoint	28°C (82°F)	28°C (82°F)	28°C (82°F)	28°C (82°F)	30°C (86°F)	30°C (86°F)	30°C (86°F)
Changeover Setpnt	24°C (75°F)	20°C (68°F)	20°C (68°F)	20°C (68°F)	24°C (75°F)	24°C (75°F)	24°C (75°F)
TO1 Ramp	HR1	CR1	HR1	CR1	OFF	HR1	HR1
TO1 Signal Type	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off
TO1 Close Pos.	40%	40%	40%	40%	40%	35%	35%
TO1 Open Pos.	0%	0%	0%	0%	0%	0%	0%
TO2 Ramp	HR1	HR1	HR1	CO ₂	OFF	HR1	HR1
TO2 Signal Type	Pulse	On/Off	Pulse	On/Off	On/Off	On/Off	On/Off
TO2 Close Pos.	40%	40%	40%	40%	40%	70%	70%
TO2 Open Pos.	0%	0%	0%	0%	0%	35%	35%
TO3 Ramp	HR2	CR2	HR2	HR1	OFF	Fan ON	Fan Auto
TO3 Signal Type	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off	On/Off
TO3 Close Pos.	40%	40%	40%	40%	40%	40%	40%
TO3 Open Pos.	0%	0%	0%	0%	0%	0%	0%
TO4 Ramp	HR2	HR2	HR2	HR1	OFF	HR1	HR1
TO4 Signal Type	Pulse	On/Off	Pulse	On/Off	On/Off	On/Off	On/Off
TO4 Close Pos.	40%	40%	40%	40%	40%	40%	40%
TO4 Open Pos.	0%	0%	0%	0%	0%	0%	0%
Motor Ramp	CR1	COr	COr	COr	CR1	CR1	COr
AO1 ramp	HR1	CR1	HR1	CR1	HR1	HR1	HR1
AO2 Ramp	HR2	HR1	HR2	HR1	OFF	HR2	Fan Auto
Al1 Input	OFF	SENS	SENS	SENS	OFF	OFF	SENS
Al2 Input	OFF	OFF	OFF	CO ₂	OFF	OFF	OFF
DI1 Input	nSb.o	nSb.o	nSb.o	Occ.o	Occ.o	nSb.o	nSb.o
Heat Prop Band 2	2°C (4°F)	2°C (4°F)	2°C (4°F)	2°C (4°F)	2°C (4°F)	1°C (2°F)	1°C (2°F)
Heat Deadband 2	1.3°C (2.6°F)	1.3°C (2.6°F)	1.3°C (2.6°F)	1.3°C (2.6°F)	0.3°C (0.6°F)	1.3°C (2.6°F)	1.3°C (2.6°F)
Cool Deadband 2	1.3°C (2.6°F)	1.3°C (2.6°F)	1.3°C (2.6°F)	1.3°C (2.6°F)	0.3°C (0.6°F)	0.3°C (0.6°F)	0.3°C (0.6°F)

Legend

Grey Text = Standard default value

Bold Text = Special default value for selected application

HR = Heating ramp
CR = Cooling ramp
COr = Changeover ramp

SENS = Changeover temperature sensor Fan ON = Fan powered box in continuous mode

Fan Auto = Fan powered box in automatic mode (follows demand)

nSb.o = Night Setback (normally open) Occ.o = Occupancy mode (normally open)

TO = TRIAC output AO = Analog output AI = Analog input DI = Digital input

Notes	







Recycling at end of life: please return this product to your Neptronic local distributor for recycling. If you need to find the nearest Neptronic authorized distributor, please consult **www.neptronic.com**.



neptronic

400 Lebeau blvd, Montreal, Qc, H4N 1R6, Canada www.neptronic.com
Toll free in North America: 1-800-361-2308

Toll free in North America: 1-800-361-2308 Tel.: (514) 333-1433

Fax: (514) 333-3163

Customer service fax: (514) 333-1091 Monday to Friday: 8:00am to 5:00pm (Eastern time)